



MG23F301E**

MG23F302E**

เตาไมโครเวฟ

คำแนะนำสำหรับผู้ใช้และคู่มือการอบอาหาร

โปรดทราบว่าการรับประกันของ Samsung ไม่ครอบคลุมถึงการให้บริการเพื่ออธิบายถึงการใช้งานผลิตภัณฑ์
แก้ไขการติดตั้งที่ไม่ถูกต้อง หรือการทำความสะอาดหรือบำรุงรักษาตามปกติ

**Planet
First** 100 %
Recycled Paper

คู่มือนี้ใช้กระดาษรีไซเคิล 100 %

imagine the possibilities

ขอขอบคุณที่เลือกซื้อผลิตภัณฑ์ Samsung
ในการรับบริการที่ครบครันยิ่งขึ้น
โปรดลงทะเบียนผลิตภัณฑ์ได้ที่

www.samsung.com/register

SAMSUNG

สารบัญ

คู่มือค้นหาอย่างรวดเร็ว	11
คุณสมบัติเตาอบ.....	12
เตาอบ.....	12
แผงควบคุม.....	12
อุปกรณ์เสริม.....	13
การใช้เตาอบ.....	14
เตาไมโครเวฟทำงานอย่างไร.....	14
การตรวจสอบว่าเตาไมโครเวฟของคุณทำงานอย่างถูกต้อง.....	14
การตั้งเวลา.....	15
การอบ/อุ่นอาหาร.....	15
ระดับพลังงาน.....	16
การปรับเวลาอบอาหาร.....	16
การหยุดการอบอาหาร.....	16
ละลายน้ำแข็ง (เวลา).....	16
การใช้คุณสมบัติละลายน้ำแข็ง (น้ำหนัก).....	17
การใช้คู่มือการปรุงอาหารด้วยไอน้ำ (เฉพาะรุ่น MG23F301EF*, MG23F301EJ*, MG23F302EF*, MG23F302EJ* เท่านั้น).....	17
การใช้งานอบเกรียม (เฉพาะรุ่น MG23F301EC*, MG23F301EJ*, MG23F302EC*, MG23F302EJ* เท่านั้น).....	19
การเลือกอุปกรณ์เสริม.....	20
การย่าง.....	20
การใช้ไมโครเวฟผสมการย่าง0.....	21
คู่มือสำหรับอุปกรณ์การทำอาหาร.....	22
คู่มือการอบอาหาร.....	23
การแก้ไขปัญหา.....	31
ข้อมูลจำเพาะด้านเทคนิค.....	31

ข้อมูลเกี่ยวกับความปลอดภัย

การใช้คู่มือฉบับนี้

ขอขอบคุณที่เลือกใช้เตาไมโครเวฟ SAMSUNG คำแนะนำสำหรับผู้ใช้นี้ประกอบด้วยข้อมูลที่เป็ประโยชน์มากมายเกี่ยวกับการอบอาหารด้วยเตาไมโครเวฟของคุณ ดังนี้

- ข้อควรระวังเพื่อความปลอดภัย
- อุปกรณ์เสริมและภาษาที่เหมาะสม
- เคล็ดลับในการอบอาหารที่มีประโยชน์
- เคล็ดลับในการอบอาหาร

คำอธิบายสัญลักษณ์และไอคอน



คำเตือน

อันตรายหรือการกระทำที่ไม่ปลอดภัยที่อาจทำให้เกิด การบาดเจ็บสาหัสหรือเสียชีวิต



ข้อควรระวัง

อันตรายหรือการกระทำที่ไม่ปลอดภัยที่อาจทำให้เกิด การบาดเจ็บเล็กน้อยหรือทำให้
สิ่งของเสียหาย



คำเตือน อันตรายจากไฟ



คำเตือน พื้นผิวร้อน



คำเตือน ไฟฟ้า



คำเตือน วัตถุที่ระเบิดได้



ห้ามทำ



ห้ามสัมผัส



ห้ามถอดประกอบ



ทำตามคำแนะนำอย่างเคร่งครัด



ถอดปลั๊กไฟจากเต้าเสียบที่ผนัง



ตรวจสอบว่าเครื่องมีการลงกราวด์เพื่อป้องกัน
ไฟฟ้าดูด



ติดต่อศูนย์บริการเพื่อขอรับความช่วยเหลือ



หมายเหตุ



ข้อมูลสำคัญ

คำแนะนำสำคัญเพื่อความปลอดภัย

โปรดอ่านให้ละเอียด และเก็บไว้เป็นข้อมูลอ้างอิงในอนาคต
โปรดปฏิบัติตามข้อควรระวังเพื่อความปลอดภัยตลอดเวลา
ก่อนที่จะใช้เตาอบ โปรดปฏิบัติตามคำแนะนำต่อไปนี้

⚠ คำเตือน (การทำงานของไมโครเวฟเท่านั้น)

- ☐ คำเตือน: ห้ามใช้เตาอบหากประตูหรือซีลขอบประตูเสียหาย
จนกว่าจะได้รับการซ่อมแซมจากช่างผู้ชำนาญ
- ☐ คำเตือน: อาจเกิดอันตรายขึ้นได้ หากให้บุคคลที่ไม่ใช่ช่างที่
มีความชำนาญเป็นผู้ซ่อมบำรุงซึ่งต้องมีการถอดฝาครอบของ
เครื่อง ซึ่งเป็นเครื่องป้องกันพลังงานไมโครเวฟ
- ☐ คำเตือน: โปรดอย่าอุ่นของเหลวและอาหารอื่นในภาชนะที่ปิด
สนิท เนื่องจากอาจจะระเบิดได้
- ☐ อุปกรณ์นี้ใช้สำหรับการใช้งานภายในครัวเรือนเท่านั้น
- ★ คำเตือน: ไม่ควรให้เด็กใช้เตาอบตามลำพัง ยกเว้นกรณีที่เด็ก
ได้รับคำแนะนำเพียงพอที่จะใช้เตาอบอย่างปลอดภัย และทราบ
ถึงอันตรายจากการใช้ผิดวิธี

★ คำเตือน: อุปกรณ์นี้สามารถใช้งานโดยเด็กที่มีอายุ 8 ปีขึ้นไป
และบุคคลที่มีสมรรถภาพร่างกาย ประสาทสัมผัส หรือสภาพจิต
ไม่เป็นปกติ หรือขาดประสบการณ์หรือความรู้ ถ้าได้รับการดูแล
หรือได้รับคำแนะนำในการใช้งานโดยบุคคลที่รับหน้าที่ดูแล ห้าม
เด็กเล่นกับอุปกรณ์นี้ ห้ามมิให้เด็กเป็นผู้ทำความสะอาดและบำรุง
รักษา ยกเว้นเด็กที่มีอายุ 8 ปีขึ้นไปและมีการดูแลโดยผู้ใหญ่

★ โปรดใช้เฉพาะภาชนะที่เหมาะสมกับเตาไมโครเวฟเท่านั้น

★ เมื่ออุ่นอาหารในภาชนะพลาสติก โปรดระวังว่าอาจจะมีการติดไฟ
ขึ้นในเตาอบ

★ เตาไมโครเวฟนี้ใช้สำหรับการให้ความร้อนกับอาหารและ
เครื่องดื่ม การทำให้อาหารหรือผ้าแห้ง และการให้ความร้อนกับ
แผ่นให้ความร้อน รองเท้าสวมในบ้าน ฟองน้ำ ผ้าห่ม และวัสดุ
อื่นในลักษณะเดียวกันอาจเกิดความเสี่ยงต่อการบาดเจ็บ ติดไฟ
หรือเพลิงไหม้

⚠ ถ้าพบว่ามีควัน ให้ปิดหรือถอดปลั๊กอุปกรณ์ และอย่าเปิดประตู
เตาอบ เพื่อมิให้เกิดเปลวไฟ

★ คำเตือน: ระหว่างการอุ่นร้อนเครื่องต้มด้วยไมโครเวฟ จะมีการเดือดที่ล้นๆออกไป ดังนั้น โปรดใช้ความระมัดระวังเมื่อถือภาชนะ

★ คำเตือน: ควรคนหรือเขย่าสิ่งที่บรรจุอยู่ในขวดนมเด็กและขวดอาหารเด็ก และตรวจสอบอุณหภูมิก่อนที่จะรับประทาน เพื่อลดความเสี่ยงของการลวก

☐ ห้ามอุ่นร้อนหรือให้ความร้อนกับไข่ทั้งเปลือกหรือไข่ต้มในเตาไมโครเวฟ เนื่องจากอาจจะระเบิดได้ แม้ว่าจะสิ้นสุดการให้ความร้อนของไมโครเวฟแล้วก็ตาม

★ ทำความสะอาดและจัดอาหารตกค้างอย่างสม่ำเสมอ

☐ หากไม่รักษาความสะอาดเตาอบอาจทำให้เกิดความเสียหายกับพื้นผิว ซึ่งอาจมีผลเสียต่อเตาอย่างมาก และอาจก่อให้เกิดอันตรายได้

☐ อุปกรณ์นี้ไม่ได้ออกแบบมาสำหรับการติดตั้งในยานพาหนะบนท้องถนน คาราวาน และยานพาหนะในลักษณะเดียวกัน

★ อุปกรณ์นี้ไม่เหมาะสำหรับบุคคลที่มีสภาพร่างกาย ประสาทสัมผัสหรือจิตที่ไม่ปกติ รวมถึงเด็กหรือบุคคลที่ขาดประสบการณ์ ความรู้ ยกเว้นจะได้รับการดูแลหรือได้รับคำแนะนำในการใช้งาน โดยบุคคลที่รับหน้าที่ดูแล โปรดระวังมิให้เด็กเล่นกับอุปกรณ์นี้

★ โปรดดูแลมิให้เด็กเล่นกับอุปกรณ์นี้

☑ กรณีที่ปลั๊กไฟของเครื่องใช้ไฟฟ้านี้เกิดเสียหาย ต้องให้ผู้ผลิต ตัวแทนให้บริการ หรือผู้ที่มีความชำนาญเป็นผู้เปลี่ยนสายไฟ เพื่อไม่ให้เกิดอันตราย

☐ คำเตือน: โปรดอย่าอุ่นของเหลวหรืออาหารอื่นในภาชนะที่ปิดสนิท เนื่องจากอาจจะระเบิดได้

☐ อุปกรณ์นี้ไม่สามารถทำความสะอาดด้วยเครื่องฉีดน้ำ

★ เตาอบนี้ควรอยู่ในตำแหน่งและความสูงที่เหมาะสม เพื่อให้สามารถเข้าถึงส่วนภายในเตาอบและบริเวณควบคุมได้ง่าย

★ ก่อนที่จะใช้เตาอบเป็นครั้งแรก ควรใช้งานเตาอบกับน้ำเป็นเวลา 10 นาที จากนั้นจึงค่อยใช้

★ ถ้าอุปกรณ์มีเสียงผิดปกติ มีควันหรือกลิ่นไหม้ ให้ถอดปลั๊กทันที และติดต่อศูนย์บริการใกล้บ้าน

★ เต้าไมโครเวฟนี้จะต้องอยู่ในตำแหน่งที่คุณสามารถเอื้อมถึงปลั๊กได้ง่าย

☐ เต้าไมโครเวฟนี้ออกแบบมาสำหรับใช้งานบนเคาน์เตอร์เท่านั้น ไม่ควรวางเต้าไมโครเวฟไว้ในช่องของตู้

⚠ คำเตือน (การทำงานของเตาอบเท่านั้น) - อุปกรณ์เสริม

☐ คำเตือน: เมื่อใช้งานอุปกรณ์นี้ในโหมดผสม ไม่ควรให้เด็กใช้งานอุปกรณ์โดยไม่มีผู้ใหญ่ดูแล เนื่องจากจะมีอุณหภูมิสูง

★ ระหว่างการใช้งานอุปกรณ์จะมีความร้อนสูง โปรดใช้ความระมัดระวังอย่าสัมผัสผิวสลดลดความร้อนภายในเตาอบ

☐ คำเตือน: ชิ้นส่วนที่เข้าถึงได้อาจร้อนจัดหลังจากการใช้งาน ควรดูแลให้พ้นมือเด็ก

☐ ห้ามใช้เครื่องทำความสะอาดด้วยไอน้ำ

☐ คำเตือน: ตรวจสอบว่าปิดอุปกรณ์แล้ว ก่อนที่จะเปลี่ยนหลอดไฟ เพื่อป้องกันไฟฟ้าช็อต

★ คำเตือน: อุปกรณ์นี้และชิ้นส่วนที่เข้าถึงได้อาจร้อนจัดระหว่างการใช้งาน โปรดใช้ความระมัดระวังอย่าสัมผัสผิวสลดลดความร้อนภายในเตาอบ ห้ามเด็กอายุต่ำกว่า 8 ขวบใช้อุปกรณ์ ยกเว้นกรณีที่มีผู้ดูแลใกล้ชิด

☐ อุณหภูมิของพื้นผิวที่สัมผัสได้อาจสูงมากเมื่ออุปกรณ์นี้ทำงาน

☐ ประตูหรือพื้นผิวภายนอกอาจร้อนจัดเมื่ออุปกรณ์ทำงาน

☐ ดูแลให้อุปกรณ์และสายไฟพ้นมือเด็กที่อายุต่ำกว่า 8 ปี

★ อุปกรณ์นี้สามารถใช้งานโดยเด็กที่มีอายุ 8 ปีขึ้นไปและบุคคลที่มีสมรรถภาพร่างกาย ประสาทสัมผัส หรือสภาพจิตไม่เป็นปกติ หรือขาดประสบการณ์หรือความรู้ ถ้าได้รับการดูแลหรือได้รับคำแนะนำในการใช้งานโดยบุคคลที่รับหน้าที่ดูแล ห้ามเด็กเล่นกับอุปกรณ์นี้ ห้ามเด็กทำความสะอาดหรือบำรุงรักษาอุปกรณ์โดยไม่มีการดูแล


❑ ห้ามใช้สารทำความสะอาดที่มีฤทธิ์กัดกร่อนหรือที่ขัดโลหะเพื่อทำความสะอาดประตูเตาอบ เนื่องจากจะทำให้พื้นผิวเป็นรอยและทำให้แก้วแตกได้

❑ อุปกรณ์นี้ไม่ได้ออกแบบมาเพื่อใช้งานด้วยเครื่องจับเวลาภายนอกหรือระบบบริโมทคอนโทรลแยกต่างหาก

การติดตั้งเตาไมโครเวฟ

วางเตาไว้บนพื้นผิวที่เรียบและได้ระดับ 85 ซม. เหนือพื้น มีความแข็งแรงเพียงพอที่จะรับน้ำหนักของเตาได้อย่างปลอดภัย

1. เมื่อคุณติดตั้งเตาอบ โปรดจัดวางให้มีการระบายอากาศที่เพียงพอ โดยเว้นช่องว่างอย่างน้อย 10 ซม. (4 นิ้ว) ที่ด้านหลังและด้านข้างของเตาอบ และเว้นที่ 20 ซม. (8 นิ้ว) ด้านบนของเตาอบ

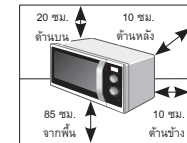

2. นำวัสดุบรรจุภัณฑ์ออกจากภายในเตาอบ
3. ติดตั้งวงแหวนและจานหมุน ทดลองว่าจานสามารถหมุนได้อย่างอิสระ (รุ่นที่มีจานหมุนเท่านั้น)
4. เตาไมโครเวฟนี้จะต้องอยู่ในตำแหน่งที่คุณสามารถเอื้อมถึงปลั๊กได้ง่าย

❑ กรณีที่ปลั๊กไฟของเครื่องใช้ไฟฟ้านี้เกิดเสียหาย ต้องให้ผู้ผลิต ตัวแทนให้บริการ หรือผู้ที่มีความชำนาญเป็นผู้เปลี่ยนสายไฟ เพื่อไม่ให้เกิดอันตราย เพื่อความปลอดภัยของคุณ โปรดเสียบปลั๊กสายไฟเข้ากับเต้ารับ ไฟฟ้ากระแสสลับที่มีการลงกราวด์อย่างถูกต้อง

- ❑ ห้ามติดตั้งเตาไมโครเวฟในบริเวณที่มีความร้อนและความชื้นสูง เช่น ถัดจากเตาอบธรรมดาหรือเครื่องทำความร้อน โปรดปฏิบัติตามข้อกำหนดการจ่ายไฟของเตาอบ และหากจะใช้สายต่อ จะต้องใช้สายที่เป็นมาตรฐานเดียวกับสายไฟของเตาอบ เช็ดด้านในของชิลประตูด้วยผ้าหมาด ก่อนที่จะใช้เตาไมโครเวฟเป็นครั้งแรก

การทำความสะอาดเตาอบไมโครเวฟของคุณ

โปรดทำความสะอาดส่วนต่อไปนี้ในเตาไมโครเวฟเป็นประจำ เพื่อไม่ให้มีไขมันและเศษอาหารเกาะ:

- ผิวหน้าด้านในและด้านนอก
- ประตูและชิลขอบประตู
- จานหมุนและวงแหวน (รุ่นที่มีจานหมุนเท่านั้น)

- ❑ ทุกครั้งต้องตรวจสอบว่าชิลประตูสะอาดและประตูสามารถปิดได้อย่างเหมาะสม

- ❑ การไม่รักษาความสะอาดเตาอบอาจทำให้เกิดความเสียหายกับพื้นผิว ซึ่งอาจมีผลเสียต่อเตาอย่างมาก และอาจก่อให้เกิดอันตรายได้

 
1. ทำความสะอาดพื้นผิวด้านนอกด้วยผ้านุ่ม ชุบน้ำอุ่นผสมน้ำยาล้างจาน ล้างให้สะอาดและเช็ดให้แห้ง
2. ขจัดคราบอาหารที่กระเด็นบนพื้นผิวด้านในของเตาอบด้วยผ้าชุบน้ำยาล้างจาน ล้างให้สะอาดและเช็ดให้แห้ง
3. เพื่อให้เศษอาหารที่แห้งแข็งหลุดออกง่ายขึ้น และขจัดกลิ่นไม่พึงประสงค์ ให้วางถ้วยน้ำมะนาวผสมน้ำในเตาอบ และให้ความร้อนโดยใช้พลังงานเต็มที่เป็นเวลาสิบนาที
4. ล้างจานที่ใช้เครื่องล้างได้เมื่อใดก็ตามที่ต้องการ

- ☑ **โปรดอย่าทำน้ำหกลในช่องระบาย ห้าม** ใช้ผลิตภัณฑ์ประเภทขี้ดู่หรือสารละลายทางเคมีเด็ดขาด โปรดใช้ความระมัดระวังเมื่อทำความสะอาดชิลขอบประตู เพื่อไม่ให้มีสิ่งสกปรก:

- สะสม
- ทำให้ประตูปิดไม่สนิท

- ☑ **ทำความสะอาดภายในเตาอบหลังจากใช้งานทันที** โดยใช้ น้ำยาล้างอ่อนๆ แต่โปรดรอให้เตาไมโครเวฟเย็นลงก่อนที่จะทำความสะอาด เพื่อป้องกันอันตรายที่อาจเกิดขึ้น

เมื่อทำความสะอาดส่วนบนที่อยู่ด้านในช่องเตาอบ ให้หมุนตัวทำความร้อนลง 45 ° แล้วทำความสะอาด (รุ่นที่ขจัดลวดความร้อนหมุนได้เท่านั้น)



การเก็บรักษาและซ่อมเตาไมโครเวฟ

โปรดทราบข้อควรระวังต่อไปนี้ เมื่อเก็บรักษาหรือนำเตาไมโครเวฟไปซ่อมแซม

ห้ามใช้เตาอบ หากประตูหรือซีลขอบประตูเสียหาย

- บานพับเสียหาย
- ซีลมีความเสียหาย
- โครงภายนอกของเตาอบบิดหรืองอ

โปรดใช้บริการซ่อมบำรุงโดยช่างผู้ชำนาญการซ่อมไมโครเวฟเท่านั้น

- ❑ ห้ามถอดโครงภายนอกของเตาอบ หากเตาไมโครเวฟทำงานไม่ถูกต้อง หรือต้องมีการบำรุงรักษา หรือหากคุณมีข้อสงสัย
- ถอดสายไฟออกจากปลั๊กที่ผนัง
- ติดต่อศูนย์บริการหลังการขายที่อยู่ใกล้

- ❑ หากคุณต้องการเก็บเตาอบไว้ชั่วคราว โปรดเก็บไว้ในที่แห้งและไม่มีฝุ่นละออง
- สาเหตุ: ฝุ่นละอองและความชื้นอาจมีผลเสียต่อส่วนประกอบของเตาอบ

- ❑ เตาไมโครเวฟนี้ไม่เหมาะสำหรับใช้งานเพื่อการพาณิชย์
- ❑ ห้ามเปลี่ยนหลอดไฟด้วยตนเอง เพื่อความปลอดภัย
- โปรดติดต่อศูนย์บริการลูกค้าที่ได้รับอนุญาตของ Samsung ที่อยู่ใกล้ เพื่อบันทึกหมายเลขที่มีคุณสมบัติเป็นผู้เปลี่ยนหลอดไฟให้

⚠ คำเตือน	🔥	⚡	💧	🔧
❑ ควรให้เจ้าหน้าที่ผู้มีความชำนาญเท่านั้นเป็นผู้แก้ไขหรือซ่อมแซมอุปกรณ์	✓	✓	✓	✓
❑ ห้ามให้ความร้อนของเหลวหรืออาหารอื่นในภาชนะที่ปิดสนิทแน่นสำหรับฟังก์ชันไมโครเวฟ	✓	✓	✓	✓
❑ เพื่อความปลอดภัย ห้ามใช้เครื่องทำความร้อนด้วยแรงดันน้ำหรือเครื่องทำความร้อนด้วยเครื่องฉีดไอน้ำ	✓	✓	✓	✓
❑ ห้ามติดตั้งอุปกรณ์นี้ใกล้เครื่องทำความร้อน วัตถุไวไฟ ความชื้น ตำแหน่งที่มีน้ำมันหรือฝุ่นละอองมาก ในตำแหน่งที่ได้รับแสงแดดโดยตรงหรือได้รับน้ำ หรือในที่ซึ่งอาจมีก๊าซรั่ว หรือบนพื้นที่ไม่เรียบ	✓	✓	✓	✓
🔌 อุปกรณ์นี้ต้องมีการลงกราวด์อย่างเหมาะสมตามข้อกำหนดของท้องถิ่นหรือของประเทศ	✓	✓	✓	✓
★ ห้ามเปลี่ยนแปลงทั้งหมด เช่น ฝุ่นละอองหรือน้ำออกจากช่องข้อปลั๊กไฟและหน้าสัมผัสเป็นประจำ โดยใช้ผ้าแห้ง	✓	✓	✓	✓

<input type="checkbox"/>	ห้ามดึงหรือบิดงอหรือวางสิ่งของทับสายไฟ	✓	✓	✓	✓
★	ถ้ามีก๊าซรั่ว (เช่น ก๊าซโพรเพน ก๊าซหุงต้ม ฯลฯ) ให้ระบายอากาศทันที โดยไม่สัมผัสกับปลั๊กไฟ	✓	✓	✓	✓
<input type="checkbox"/>	ห้ามสัมผัสปลั๊กไฟด้วยมือที่เปียก	✓	✓	✓	✓
<input type="checkbox"/>	ห้ามปิดเครื่องด้วยการถอดปลั๊กไฟ ขณะที่เครื่องกำลังทำงานอยู่	✓	✓	✓	✓
<input type="checkbox"/>	ห้ามสอดนิ้วหรือสิ่งแปลกปลอม ถ้ามีสิ่งแปลกปลอมหรือน้ำเข้าเครื่อง ให้ถอดปลั๊กไฟและติดต่อศูนย์บริการที่อยู่ใกล้ที่สุด	✓	✓	✓	✓
<input type="checkbox"/>	ห้ามใช้แรงกดหรือกระแทกอุปกรณ์	✓	✓	✓	✓
<input type="checkbox"/>	อย่าวางอุปกรณ์ไว้บนวัตถุที่เปราะบางเช่นชิ่งหรือกระจก	✓	✓		
<input type="checkbox"/>	ห้ามใช้เบนซิน ทินเนอร์ แอลกอฮอล์ เครื่องทำความสะอาดด้วยไอน้ำหรือเครื่องฉีดน้ำแรงดันสูงเพื่อทำความสะอาดอุปกรณ์	✓	✓	✓	✓
<input type="checkbox"/>	ตรวจสอบว่าแรงดันไฟฟ้า ความถี่ และกระแสไฟฟ้าตรงกับข้อมูลจำเพาะของผลิตภัณฑ์	✓	✓		✓
<input type="checkbox"/>	ต่อสายไฟเข้ากับเต้ารับไฟฟ้าที่ผืนผนังอย่างแน่นหนา ห้ามใช้ตัวแปลงปลั๊ก สายต่อหรือหม้อแปลงไฟฟ้า	✓	✓	✓	
<input type="checkbox"/>	ห้ามเกี่ยวสายไฟกับวัตถุที่เป็นโลหะ ใส่สายไฟไว้ระหว่างวัตถุหรือหลังเตาอบ	✓	✓	✓	
<input type="checkbox"/>	ห้ามใช้ปลั๊กไฟที่เสียหาย สายไฟ หรือเต้ารับไฟฟ้าที่เสียหาย หลวม เมื่อปลั๊กไฟหรือสายไฟเสียหาย โปรดติดต่อศูนย์บริการใกล้บ้านคุณ	✓	✓	✓	✓
<input type="checkbox"/>	ห้ามฉีดพ่นน้ำบนเตาอบ	✓	✓		

ไทย - 9

<input type="checkbox"/>	ห้ามวางสิ่งของบนเตาอบ ภายในหรือบนประตูเตาอบ	✓	✓	✓	
<input type="checkbox"/>	ห้ามพันสารระเหยเช่นยาฆ่าแมลงบนพื้นผิวผลิตภัณฑ์โดยตรง	✓	✓		
<input type="checkbox"/>	โปรดอย่าเก็บวัสดุที่ติดไฟได้ในเตาอบ ใช้ความระมัดระวังเมื่อให้ความร้อนอาหารหรือเครื่องต้มที่มีแอลกอฮอล์ เนื่องจากไอของแอลกอฮอล์อาจสัมผัสกับส่วนที่ร้อนจัดของเตาอบ	✓		✓	✓
★	ให้เด็กอยู่ห่างจากประตูที่เปิดหรือปิด เนื่องจากอาจชนกับประตูหรือทำให้ประตูหนีบนิ้วได้	✓	✓	✓	✓
★	คำเตือน: ระหว่างการอุ่นร้อนเครื่องต้มด้วยไมโครเวฟ จะมีการเดือดที่ล่าช้าออกไป ดังนั้น โปรดใช้ความระมัดระวังเมื่อถือภาชนะ เพื่อป้องกันสถานการณ์นี้ โปรดพักอาหารอย่างน้อย 20 วินาที หลังจากปิดเตาอบ เพื่อให้อุณหภูมิกระจายตัวอย่างสม่ำเสมอทุกครั้ง คนอาหารระหว่างให้ความร้อนถ้าจำเป็น และคนทุกครั้งหลังจากอุ่น ในกรณีที่ของเหลวลวก โปรดปฏิบัติตามคำแนะนำในการปฐมพยาบาล: <ul style="list-style-type: none"> • แขนบริเวณที่ถูกลวกในน้ำเย็นเป็นเวลาอย่างน้อย 10 นาที • พั่นด้วยผ้าพันแผลที่แห้งและสะอาด • โปรดอย่าทาครีม น้ำมัน หรือโลชั่น 	✓	✓	✓	✓
<div> <div>⚠ ข้อควรระวัง</div> <div>     </div> </div>					
★	โปรดใช้เฉพาะภาชนะที่เหมาะสมกับเตาไมโครเวฟเท่านั้น ห้ามใช้ภาชนะที่เป็นโลหะ जानที่มีขอบทองหรือเงิน เหล็กเสียบ ส้อม ฯลฯ นำวัตถุที่ใช้ปิดถุงออกจากถุงกระดาษหรือถุงพลาสติกก่อน สาเหตุ: อาจมีประกายไฟเกิดขึ้น ซึ่งทำให้เตาไมโครเวฟเสียหาย	✓		✓	✓
<input type="checkbox"/>	ห้ามใช้เตาไมโครเวฟเพื่อทำให้หนังสือพิมพ์หรือผ้าแห้ง	✓		✓	✓
★	ใช้เวลาสั้นลงสำหรับอาหารปริมาณน้อย เพื่อป้องกันอาหารร้อนเกินและไหม้	✓		✓	✓

<input type="checkbox"/>	ห้ามจุ่มสายไฟหรือปลั๊กในน้ำ และระวังอย่าให้สายไฟอยู่ใกล้พื้นผิวที่ร้อน	✓	✓		
<input type="checkbox"/>	ห้ามอุ่นร้อนหรือให้ความร้อนกับไขทั้งเปลือกหรือไขต้มในเตาไมโครเวฟ เนื่องจากอาจจะระเบิดได้ แม้ว่าจะสิ้นสุดการให้ความร้อนของไมโครเวฟแล้วก็ตาม นอกจากนี้อย่าให้ความร้อนขวด เหยือก หรือภาชนะที่ปิดฝาสนิทหรือเป็นสุญญากาศ ถั่วที่มีเปลือก มะเขือเทศ ฯลฯ			✓	✓
<input type="checkbox"/>	ห้ามปิดหรือบล็อกระบายอากาศด้านหลังของเตาด้วยผ้าหรือกระดาษ ผ้าหรือกระดาษอาจติดไฟ ขณะที่มีการระบายอากาศหรือออกจากเตา เตาอบอาจมีความร้อนสูงเกินไป และตัดการทำงานโดยอัตโนมัติ และจะไม่สามารถใช้งานได้นานกว่าจะเย็นลง	✓		✓	
<input type="checkbox"/>	ทุกครั้ง จะต้องใช้ถุงมือกันความร้อนขณะนำอาหารออกจากเตาเพื่อป้องกันความร้อนลวก			✓	
<input checked="" type="checkbox"/>	คนของเหลวเมื่อถึงครึ่งหนึ่งของเวลาอุ่น หรือหลังจากสิ้นสุดการอุ่นร้อน และพักให้ของเหลวเย็นลงอย่างน้อย 20 วินาทีหลังจากให้ความร้อนเพื่อป้องกันการเดือดและกระเด็น			✓	
<input checked="" type="checkbox"/>	เย็นห่างจากเตาอบประมาณหนึ่งช่วงแขนเมื่อเปิดประตู เพื่อป้องกันไอน้ำหรืออากาศร้อนลวก			✓	
<input type="checkbox"/>	ห้ามใช้งานไมโครเวฟเมื่อไม่มีอาหารอยู่ภายในเตา เตาไมโครเวฟจะปิดลงโดยอัตโนมัติหลังจากผ่านไป 30 นาทีเพื่อความปลอดภัย ขอแนะนำให้วางแก้วน้ำไว้ภายในเตาอบตลอดเวลา เพื่อดูดซับพลังงานไมโครเวฟในกรณีที่เตาไมโครเวฟทำงานโดยไม่ตั้งใจ	✓			✓
<input checked="" type="checkbox"/>	ติดตั้งเตาอบตามระยะห่างที่กำหนดในคู่มือนี้ (ดูที่ การติดตั้งเตาไมโครเวฟ)	✓		✓	
<input checked="" type="checkbox"/>	ใช้ความระมัดระวังเมื่อต่ออุปกรณ์ไฟฟ้าเข้ากับเต้าเสียบใกล้เตาอบ	✓	✓	✓	

ข้อควรระวังเพื่อหลีกเลี่ยงการได้รับพลังงานไมโครเวฟมากเกินไป (ฟังก์ชันไมโครเวฟเท่านั้น)

หากไม่ปฏิบัติตามข้อควรระวังเพื่อความปลอดภัยต่อไปนี้ อาจทำให้ได้รับพลังงานไมโครเวฟที่เป็นอันตราย

- ห้ามใช้เตาอบขณะที่ประตูของเตาเปิดอยู่ หรือดัดแปลงแก้ไขล็อกเพื่อความปลอดภัย (สลักของประตู) หรือสวิตช์ในตัวล็อกเพื่อความปลอดภัย ไม่ว่าในกรณีใดๆ
- ห้ามสอดวัตถุใดๆ ระหว่างประตูของเตาอบกับด้านหน้า หรือปล่อยให้มืออาหารหรือสารทำความเย็นอยู่บริเวณที่ผิวหน้าของซีล ตรวจสอบว่าประตูและซีลของประตูสะอาดอยู่เสมอ โดยเช็ดด้วยผ้าหมาดและเช็ดอีกครั้งด้วยผ้าแห้งที่แห้งหลังจากการใช้งาน
- ห้ามใช้เตาอบที่มีความเสียหาย จนกว่าจะได้รับการซ่อมแซมโดยช่างผู้ชำนาญการซ่อมบำรุงไมโครเวฟที่ผ่านการฝึกอบรมโดยผู้ผลิต โปรดปิดประตูของเตาอบให้สนิท และตรวจสอบว่าส่วนต่างๆ ต่อไปนี้ไม่ชำรุดเสียหาย:
 - (1) ประตู (งอ)
 - (2) บานพับของประตู (หักหรือหลวม)
 - (3) ซีลประตูและผิวของซีล
- ห้ามปรับแต่งหรือซ่อมแซมเตาอบโดยบุคคลอื่นที่ไม่ใช่ผู้ชำนาญการซ่อมบำรุงไมโครเวฟที่ผ่านการฝึกอบรมโดยผู้ผลิต

 
Samsung จะเรียกเก็บค่าบริการซ่อมแซม สำหรับการเปลี่ยนอุปกรณ์เสริมหรือซ่อมจุดบกพร่องที่ไม่ใช่ส่วนสำคัญ ถ้าความเสียหายของอุปกรณ์ และ/หรือความเสียหายหรือการสูญเสียอุปกรณ์เสริมนั้นเกิดจากการกระทำของผู้ใช้ รายการที่ครอบคลุมได้แก่:

- รอยบุบ รอยขีดข่วน ประตู มือจับ แผงด้านนอก หรือแผงควบคุมแตกหัก
 - ถาดแตกหรือสูญหาย ล้อเลื่อนน้ำหนัก เพื่องวงแหวน หรือตะแกรงลวด
- ใช้อุปกรณ์นี้เพื่อวัตถุประสงค์ที่อธิบายในคู่มือคำแนะนำนี้เท่านั้น ค่าเตือนและคำแนะนำเพื่อความปลอดภัยในคู่มือนี้ไม่ได้ครอบคลุมถึงสภาวะและสถานการณ์ทั้งหมดที่สามารถเกิดขึ้นได้ คุณมีหน้าที่จะต้องใช้สามัญสำนึก ความระมัดระวัง และใส่ใจกับการติดตั้ง บำรุงรักษา และใช้งานอุปกรณ์
 - เนื่องจากคำแนะนำในการใช้งานต่อไปนี้จะใช้สำหรับหลายรุ่น ลักษณะของเตาอบของคุณอาจแตกต่างจากที่อธิบายในคู่มือนี้ และสัญญาณเตือนบางอย่างอาจไม่มีผล ถ้าคุณมีข้อซักถามหรือข้อกังวลใด โปรดติดต่อศูนย์บริการที่ใกล้ที่สุด หรือหาความช่วยเหลือและข้อมูลออนไลน์ได้ที่ www.samsung.com
 - เตาไมโครเวฟนี้ใช้สำหรับการให้ความร้อนกับอาหาร ใช้สำหรับการใช้งานภายในครัวเรือนเท่านั้น ห้ามอุ่นผ้าทุกประเภทหรือเบาะที่มีไส้ซึ่งอาจลุกไหม้ได้ ผู้ผลิตไม่รับผิดชอบต่อความเสียหายที่เกิดจากการใช้อุปกรณ์อย่างไม่ถูกต้องหรือไม่เหมาะสม
 - การไม่รักษาความสะอาดเตาอบอาจทำให้เกิดความเสียหายกับพื้นผิว ซึ่งอาจมีผลเสียต่อเตาอย่างมาก และอาจก่อให้เกิดอันตรายได้

คู่มือค้นหาอย่างรวดเร็ว


ถ้าคุณต้องการอบอาหาร

- วางอาหารในเตาอบ
เลือกระดับพลังงานโดยกดปุ่ม **ควบคุมกำลังไฟในการปรุงอาหาร**
หนึ่งครั้งหรือตามจำนวนที่เหมาะสม




- เลือกเวลาการปรุงอาหารโดยหมุนปุ่ม **ตั้งเวลาน้ำหนัก (G/9)**

 ผลลัพธ์: การปรุงอาหารจะเริ่มต้นหลังจากผ่านไประมาณสองวินาที




ถ้าคุณต้องการละลายน้ำแข็ง (น้ำหนัก) อาหาร

 - หมุนปุ่ม **ควบคุมกำลังไฟในการปรุงอาหาร** ไปที่สัญลักษณ์ **ละลายน้ำแข็ง (น้ำหนัก)**




- หมุนปุ่ม **ตั้งเวลาน้ำหนัก (G/9)** เพื่อเลือกน้ำหนักที่ต้องการ

 ผลลัพธ์: การปรุงอาหารจะเริ่มต้นหลังจากผ่านไประมาณสองวินาที




ถ้าต้องการปรับเวลาในการปรุงอาหาร

 วางอาหารไว้ในเตาอบ
หมุนปุ่ม **ตั้งเวลาน้ำหนัก (G/9)** ไปที่เวลาที่ต้องการ




ถ้าคุณต้องการย่างอาหาร

 - หมุนปุ่ม **ควบคุมกำลังไฟในการปรุงอาหาร** ไปที่สัญลักษณ์ **ย่าง**




- หมุนปุ่ม **ตั้งเวลาน้ำหนัก (G/9)** เพื่อเลือกเวลาที่ต้องการ

 ผลลัพธ์: การปรุงอาหารจะเริ่มต้นหลังจากผ่านไประมาณสองวินาที




คุณสมบัติเตาอบ

เตาอบ

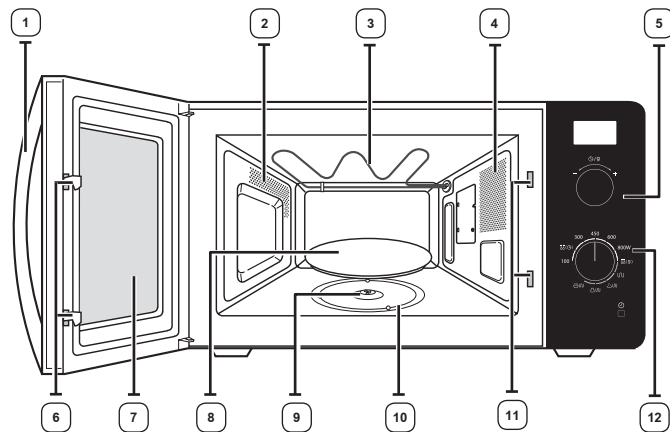

- | | |
|------------------------|-------------------------------------|
| 1. ที่จับประตู | 7. ประตู |
| 2. ช่องระบายอากาศ | 8. จานหมุน |
| 3. ย่าง | 9. เพื่องของจานหมุน |
| 4. ไฟ | 10. วงแหวน |
| 5. ปุ่มตั้งเวลาน้ำหนัก | 11. ช่องล็อกเพื่อความปลอดภัย |
| 6. สลักประตู | 12. ปุ่มควบคุมกำลังไฟในการปรุงอาหาร |

แผงควบคุม

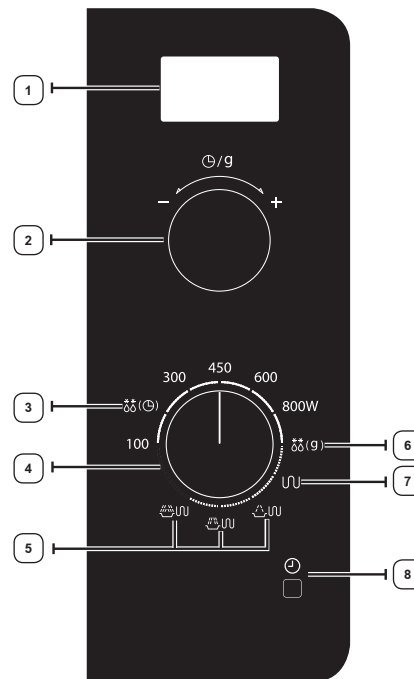


- | | |
|------------------------------------|---------------------------|
| 1. จอแสดงผล | 5. ผสม (ไมโครเวฟ + ย่าง) |
| 2. ปุ่มตั้งเวลาน้ำหนัก | 6. ละลายน้ำแข็ง (น้ำหนัก) |
| 3. ละลายน้ำแข็ง (เวลา) | 7. ย่าง |
| 4. ปุ่มควบคุมกำลังไฟในการปรุงอาหาร | 8. ปุ่มตั้งค่านาฬิกา |

อุปกรณ์เสริม

คุณจะได้รับอุปกรณ์เสริมหลายชนิด เพื่อนำมาใช้ร่วมกับเตาอบ โดยขึ้นอยู่กับรุ่นที่คุณซื้อ


1. วงแหวน เพื่อวางไว้บริเวณส่วนกลางของเตาอบ

 วัตถุประสงค์: วงแหวนนี้จะรองรับน้ำหนักของจานหมูน




2. จานหมูน วางเหนือวงแหวน โดยให้ส่วนกลางสวมพอดีกับเฟือง

 วัตถุประสงค์: จานหมูนทำหน้าที่เป็นพื้นที่หลักสำหรับอบอาหาร และสามารถถอดออกทำความสะอาดได้ง่าย



3. ตะแกรงย่าง สำหรับวางบนจานหมูน

 
วัตถุประสงค์: ตะแกรงโลหะสามารถใช้ได้ในการย่างและการอบอาหารแบบผสม



4. จานอบเกรียม โปรดดูหน้า 19-20

(เฉพาะรุ่น MG23F301EC*, MG23F301EJ*, MG23F302EC*, MG23F302EJ* เท่านั้น)

 วัตถุประสงค์: จานอบเกรียมนี้ใช้สำหรับอบอาหารให้เกรียมเป็นสีเหลืองในการอบอาหารแบบไมโครเวฟ ย่าง และแบบผสม และทำให้แบ่งของอาหารประเภทเพสตรี้และพิซซ่ากรอบ




- ห้ามใช้เตาไมโครเวฟหากไม่มีวงแหวนหรือจานหมูน

5. หม้อหนึ่ง โปรดดูที่หน้า 17 ถึง 18

(เฉพาะรุ่น MG23F301EF*, MG23F301EJ*, MG23F302EF*, MG23F302EJ* เท่านั้น)

 วัตถุประสงค์: ใช้หม้อหนึ่งพลาสติกเมื่อใช้ฟังก์ชันระบบนึ่งอาหาร



- ห้ามใช้เตาไมโครเวฟหากไม่มีวงแหวนหรือจานหมูน

- ห้ามใช้งานโหมด ย่าง (U) และ ผสม (E+U) กับหม้อหนึ่ง

โหมดการทำงาน	ไมโครเวฟ (E)	ย่าง (U)	ผสม (E+U)
 (หม้อหนึ่ง)	O	X	X

การใช้เตาอบ

เตาไมโครเวฟทำงานอย่างไร


ไมโครเวฟคือคลื่นแม่เหล็กไฟฟ้าความถี่สูง พลังงานที่ปล่อยออกมาทำให้อาหารสุกหรือร้อนขึ้น โดยไม่มีการเปลี่ยนรูปร่างหรือสี

คุณสามารถใช้เตาไมโครเวฟเพื่อ:

- ละลายน้ำแข็ง (กำหนดเองและอัตโนมัติ)
- อบอาหาร
- อุ่นอาหาร

หลักการอบอาหาร

1. ไมโครเวฟที่เกิดจากแม็กเนตรอนจะกระจายอย่างเป็นระเบียบ ในขณะที่อาหารหมุนอยู่บนจานหมุน ทำให้อาหารสุกทั่วถึงกัน
2. อาหารจะดูดซับไมโครเวฟลิ้นประมาณ 1 นิ้ว (2.5 ซม.) จากนั้นการอบอาหารจะเกิดขึ้นต่อไป เมื่อมีการถ่ายเทความร้อนภายในอาหาร
3. เวลาในการอบอาหารจะขึ้นอยู่กับตัวรับอาหารและคุณสมบัติของอาหารชนิดนั้น:
 - ปริมาณและความหนาแน่น
 - ปริมาณน้ำภายในอาหาร
 - อุณหภูมิเริ่มต้น (มีการแช่เย็นไว้หรือไม่)

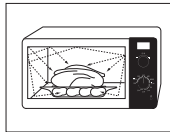


เนื่องจากส่วนกลางของอาหารสุกเนื่องจากการถ่ายเทความร้อน การอบอาหารจึงเกิดขึ้นแม้ว่าคุณจะนำอาหารออกจากเตาแล้วก็ตาม ดังนั้น โปรดปฏิบัติตามเวลาพักที่แนะนำในตำราอาหารและในคู่มือนี้เพื่อให้:

- อาหารสุกทั่วถึงกันจนถึงด้านใน
- อาหารมีอุณหภูมิเท่ากันทั้งหมด

การตรวจสอบว่าเตาไมโครเวฟของคุณทำงานอย่างถูกต้อง

กระบวนการง่าย ๆ ต่อไปนี้จะช่วยให้คุณตรวจสอบว่าเตาไมโครเวฟของคุณทำงานถูกต้องอยู่เสมอ เปิดประตูเตาอบโดยดึงที่จับที่ด้านขวาของประตู วางแก้วใส่น้ำไว้บนจานหมุน จากนั้น ปิดประตู

 1. กำหนดพลังงานให้อยู่ที่ระดับสูงสุด โดยบิดปุ่ม **ควบคุมกำลังไฟในการปรุงอาหาร**




2. กำหนดเวลา 4 ถึง 5 นาทีโดยหมุนปุ่ม **ตั้งเวลา/น้ำหนัก (G/g)**

ผลลัพธ์:

ไฟของเตาอบจะสว่างขึ้น และจานหมุนจะเริ่มหมุน

 - 1) เตาอบจะเริ่มต้มน้ำหรืออาหาร เมื่อเสร็จแล้วก็จะส่งสัญญาณเตือน 4 ครั้ง
- 2) เตาอบจะส่งสัญญาณเตือน 3 ครั้ง (นาฬิกาจะดับ)
- 3) เวลาปัจจุบันจะปรากฏขึ้นอีกครั้ง



เตาอบจะต้องต่อเข้ากับปลั๊กไฟที่ผนังอย่างถูกต้อง จานหมุนจะต้องอยู่ในตำแหน่งที่ถูกต้องในเตา ถ้ามีการใช้ระดับพลังงานนอกเหนือจากระดับสูงสุด น้ำจะใช้เวลาเดือดนานขึ้น

การตั้งเวลา

เตาไมโครเวฟของคุณมีนาฬิกาอยู่ภายใน เมื่อมีการจ่ายไฟ “:0”, “88:88” หรือ “12:00” จะปรากฏบนหน้าจอแสดงผลโดยอัตโนมัติ

โปรดตั้งเวลาปัจจุบัน ซึ่งสามารถแสดงเวลาในระบบ 24 หรือ 12 ชั่วโมง คุณจะต้องตั้งเวลาของนาฬิกา:

- เมื่อติดตั้งเตาไมโครเวฟเป็นครั้งแรก
- หลังจากไฟฟ้าดับ

☒ อย่าลืมปรับเวลา ถ้าคุณต้องสลับระหว่างเวลาของฤดูร้อนและฤดูหนาว

☒ ฟังก์ชันประหยัดพลังงานอัตโนมัติ

ถ้าคุณไม่เลือกฟังก์ชันได้เลยเมื่ออุปกรณ์อยู่ระหว่างการตั้งค่าหรือทำงานโดยมีสถานะหยุดชั่วคราว

ฟังก์ชันจะถูกยกเลิก และนาฬิกาจะแสดงผลหลังจากผ่านไป 25 นาที

 
ไฟของเตาอบจะดับลงหลังจากผ่านไป 5 นาทีโดยประตูเปิดอยู่

1. ถ้าต้องการแสดงเวลาในรูปแบบ...


เวลาแบบ 24 ชั่วโมง

เวลาแบบ 12 ชั่วโมง


กดปุ่ม (⌚) หนึ่งหรือสองครั้ง



 
2. หมุนปุ่ม ตั้งเวลา/น้ำหนัก (⌚/g) เพื่อกำหนดชั่วโมง



 
3. กดปุ่ม (⌚)



 4. หมุนปุ่ม ตั้งเวลา/น้ำหนัก (⌚/g) เพื่อกำหนดนาที



 5. กดปุ่ม (⌚)




การอบ/อุ่นอาหาร

ขั้นตอนต่อไปนี้จะกล่าวถึงการอบและการอุ่นอาหาร

โปรดตรวจสอบการตั้งค่าการปรุงอาหารทุกครั้ง ก่อนที่จะปล่อยให้เตาอบทำงานตามลำพังขั้นแรก วางอาหารที่ส่วนกลางของจานหมุน จากนั้น ปิดประตู

 1. กำหนดพลังงานให้อยู่ที่ระดับสูงสุด โดยบิดปุ่ม **ควบคุมกำลังไฟในการปรุงอาหาร** (พลังงานสูงสุด: 800 วัตต์)




2. กำหนดเวลาโดยหมุนปุ่ม **ตั้งเวลา/น้ำหนัก (⌚/g)**

ผลลัพธ์:

ไฟของเตาอบจะสว่างขึ้น และจานหมุนจะเริ่มหมุน

 - 1) เตาอบจะเริ่มดำเนินการอบอาหาร เมื่อเสร็จแล้วก็จะส่งสัญญาณเตือน 4 ครั้ง
- 2) เตาอบจะส่งสัญญาณเตือน 3 ครั้ง (นาทีละครั้ง)
- 3) เวลาปัจจุบันจะปรากฏขึ้นอีกครั้ง



☒ ห้ามเปิดเครื่อง หากเตาอบว่างเปล่า

☒ คุณสามารถเปลี่ยนระดับพลังงานระหว่างการอบอาหาร โดยบิดปุ่ม **ควบคุมกำลังไฟในการปรุงอาหาร**

ระดับพลังงาน

คุณสามารถเลือกระดับพลังงานต่อไปนี้


ระดับพลังงาน	กำลังไฟฟ้า	
	MWO	ย่าง
สูง	800 วัตต์	-
สูงปานกลาง	600 วัตต์	-
ปานกลาง	450 วัตต์	-
ต่ำปานกลาง	300 วัตต์	-
ละลายน้ำแข็ง (เวลา)	180 วัตต์	-
ละลายน้ำแข็ง (น้ำหยด)	180 วัตต์	-
ต่ำรักษาความร้อน	100 วัตต์	-
ย่าง	-	1050 วัตต์
MWO ต่ำ + ย่าง	300 วัตต์	1050 วัตต์
MWO ปานกลาง + ย่าง	450 วัตต์	1050 วัตต์
MWO สูง + ย่าง	600 วัตต์	1050 วัตต์

- ☑ ถ้าคุณเลือกระดับพลังงานสูง จะต้องลดระยะเวลาในการอบอาหาร
- ☑ ถ้าคุณเลือกระดับพลังงานต่ำ จะต้องใช้ระยะเวลาในการอบอาหารมากขึ้น

การปรับเวลาอบอาหาร

ปรับเวลาการปรุงอาหารที่เหลือ โดยหมุนปุ่ม **ตั้งเวลา/น้ำหยด (9/9)**

 ระหว่างการอบอาหาร หากคุณต้องการเพิ่มหรือลดเวลาในการอบ ให้หมุนปุ่มบิดไปทางด้านขวาหรือซ้าย




การหยุดการอบอาหาร


คุณสามารถหยุดอบอาหารเมื่อใดก็ได้ เพื่อตรวจสอบอาหาร

1. ในการหยุดชั่วคราว ให้เปิดประตู

 ผลลัพธ์: การอบจะหยุด ในการอบอาหารต่อไป ให้ปิดประตู



 
2. ในการหยุดอย่างสมบูรณ์ หมุนปุ่ม **ตั้งเวลา/น้ำหยด (9/9)** ไปทางซ้าย "เวลาปัจจุบัน" จะปรากฏ



ละลายน้ำแข็ง (เวลา)

คุณสมบัติทำละลายน้ำแข็ง (เวลา) จะช่วยให้คุณละลายเนื้อ เป็ด ไก่ หรือปลาที่แช่แข็ง ชื้นแรก ให้วางอาหารแช่แข็งไว้ที่กึ่งกลางจานหมุน และปิดประตู

 
1. หมุนปุ่ม **ควบคุมกำลังไฟในการปรุงอาหาร** ไปที่สัญลักษณ์ **ละลายน้ำแข็ง (เวลา)**



2. หมุนปุ่ม **ตั้งเวลา/น้ำหยด (9/9)** เพื่อเลือกเวลาที่ต้องการ

ผลลัพธ์: ไฟของเตาอบจะสว่างขึ้น และจานหมุนจะเริ่มหมุน

 - 1) เตาอบจะเริ่มทำการอบอาหาร เมื่อเสร็จแล้วก็จะส่งสัญญาณเตือน 4 ครั้ง
- 2) เตาอบจะส่งสัญญาณเตือน 3 ครั้ง (นาฬิกาจะดัง)
- 3) เวลาปัจจุบันจะปรากฏขึ้นอีกครั้ง




- ☑ ใช้กับผลิตภัณฑ์สำหรับไมโครเวฟเท่านั้น

- ☑ เลือกฟังก์ชันละลายน้ำแข็ง (เวลา) แบบกำหนดเอง โดยใช้ระดับพลังงาน 180 วัตต์ หากต้องการละลายน้ำแข็งจากอาหารแบบกำหนดเอง หากต้องการรายละเอียดเพิ่มเติมเกี่ยวกับการละลายน้ำแข็ง (เวลา) และเวลาในการละลายน้ำแข็ง โปรดอ่านจากหน้า 27

การใช้คุณสมบัติละลายน้ำแข็ง (น้ำหั่น)

คุณสมบัติละลายน้ำแข็ง (น้ำหั่น) จะช่วยให้คุณละลายเนื้อ เป็ด ไก่ หรือปลาที่แช่แข็งขึ้นแรก ให้อาหารแช่แข็งไว้มิถึงกลางจานหมุน และปิดประตู

 
1. หมุนปุ่มควบคุมกำลังไฟในการปรุงอาหาร ไปที่สัญลักษณ์ ละลายน้ำแข็ง (น้ำหั่น)



2. หมุนปุ่ม ตั้งเวลา/น้ำหั่น (G/9) เพื่อเลือกน้ำหั่นที่ต้องการ

ผลลัพธ์: ไฟของเตาอบจะสว่างขึ้น และจานหมุนจะเริ่มหมุน

 - 1) เตาอบจะเริ่มต้มน้ำหั่นอาหาร เมื่อเสร็จแล้วก็จะส่งสัญญาณเตือน 4 ครั้ง
- 2) เตาอบจะส่งสัญญาณเตือน 3 ครั้ง (น้ำหั่นเสร็จ)
- 3) เวลาปัจจุบันจะปรากฏขึ้นอีกครั้ง



 ใช้กับผลิตภัณฑ์สำหรับไมโครเวฟเท่านั้น

การใช้โปรแกรมละลายน้ำแข็ง (น้ำหั่น)

โปรดนำอาหารออกจากบรรจุภัณฑ์ก่อนที่จะละลายน้ำแข็ง

วางอาหารแช่แข็งไว้บนจานหมุน

กลับข้างอาหารเมื่อได้ยินเสียงจากเตาอบ

ใช้เวลาพักอาหารให้เหมาะสม เมื่อการละลายน้ำแข็ง (น้ำหั่น) เสร็จสิ้น

อาหาร	สัดส่วน	เวลาพัก	คำแนะนำ
เนื้อ	200-1500 กรัม	20-60 นาที	หุ้มส่วนขอบด้วยฟอยล์อะลูมิเนียม
เป็ด ไก่	200-1500 กรัม	20-60 นาที	กลับข้างอาหารเมื่อได้ยินเสียงจากเตาอบ
ปลา	200-1500 กรัม	20-50 นาที	

 
การใช้คู่มือการปรุงอาหารด้วยไอน้ำ

(เฉพาะรุ่น MG23F301EF*, MG23F301EJ*, MG23F302EF*, MG23F302EJ* เท่านั้น)

 
การปรุงด้วยวิธีไอน้ำ Power Steamer ใช้หลักการนึ่งด้วยไอน้ำ ออกแบบมาสำหรับการปรุงอาหารได้รวดเร็ว ติดต่อกับภาพในตาไมโครเวฟ Samsung ของคุณ อุปกรณ์เสริมนี้เหมาะสำหรับการหุงข้าว พาสต้า ผัก ฯลฯ ได้รวดเร็วและรักษาคุณค่าทางโภชนาการของอาหารไว้ ชุดหม้อไอน้ำไมโครเวฟประกอบด้วย 3 ส่วน:



หม้อ






ภาชนะ






ฝาปิด

ชิ้นส่วนทั้งหมดสามารถทนความร้อนได้ตั้งแต่ -20 °C ถึง 140 °C เหมาะสำหรับการเก็บในช่องแช่แข็ง และสามารถใช้แยกกันหรือใช้ร่วมกันได้

เงื่อนไขของการใช้งาน:

-  ห้ามใช้:
 - ปรุงอาหารที่มีน้ำตาลหรือไขมันมาก
 - กับกรวยหรือการให้ความร้อนโดยการหมุนหรือบนเตา
-  ล้างทุกส่วนให้สะอาดด้วยน้ำยาล้างจานก่อนที่จะใช้ครั้งแรก
-  ในการดูแลเวลาในการปรุง โปรดดูคำแนะนำในตารางในหน้าถัดไป

การบำรุงรักษา:

-  คุณสามารถล้างหม้อหนึ่งในเครื่องล้างจาน
-  เมื่อล้างด้วยมือ ให้ใช้น้ำร้อนและน้ำยาล้างจาน ห้ามใช้แปรงขัด
-  อาหารบางอย่าง (เช่น มะเขือเทศ) อาจทำให้พลาสติกสีเปลี่ยนไป ซึ่งเป็นเรื่องปกติและไม่ใช่อิทธิพลของการผลิต

การละลายน้ำแข็ง:


วางอาหารแช่แข็งที่ส่วนกลางของจานหมุน โดยไม่ปิดฝา ของเหลวจะอยู่ด้านล่างของหม้อ และจะไม่ไหลต่ออาหาร

การปรุง:

อาหาร	สัดส่วน	ระดับพลังงาน	เวลาปรุง (นาที)	เวลาพักอาหาร (นาที)	การประกอบ
หัวอาร์ทิโชก	300 กรัม (1-2 ช้อน)	800 วัตต์	5-6	1-2	หม้อที่มีถาดรอง + ฝาปิด
	คำแนะนำ ล้างทำความสะอาดหัวอาร์ทิโชก ใส่ถาดรองในหม้อ จากนั้นนำไปวางบนถาด เติมน้ำมะนาวหนึ่งช้อนชา ปิดฝา				
ผักสด	300 กรัม	800 วัตต์	4-5	1-2	หม้อที่มีถาดรอง + ฝาปิด
	คำแนะนำ ซึ่งผักตามต้องการ (เช่น บรอกโคลี ดอกกะหล่ำ แครอท พริกหวาน) ล้างทำความสะอาด และหั่นเป็นชิ้นเท่าๆ กัน ใส่ถาดรองในหม้อ วางให้เสมอกันบนถาด เติมน้ำสะอาด 2 ช้อนโต๊ะ ปิดฝา				
ผักแช่แข็ง	300 กรัม	600 วัตต์	7-8	2-3	หม้อที่มีถาดรอง + ฝาปิด
	คำแนะนำ วางผักแช่แข็งลงในหม้อหนึ่ง ใส่ถาดรองในหม้อ เติมน้ำสะอาด 1 ช้อนโต๊ะ ปิดฝา คนให้ทั่วหลังการอบและพักอาหาร				
ข้าว	250 กรัม	800 วัตต์	15-18	5-10	หม้อ + ฝาปิด
	คำแนะนำ ใส่ข้าวในหม้อหนึ่ง เติมน้ำเย็น 500 มล. ปิดฝา หลังการอบ ให้พักอาหารเป็นเวลา 5 นาทีสำหรับข้าวขาว และ 10 นาทีสำหรับข้าวกล้อง				
มันฝรั่งอบทั้งเปลือก	500 กรัม	800 วัตต์	7-8	2-3	หม้อ + ฝาปิด
	คำแนะนำ ซึ่งน้ำหนักและล้างมันฝรั่งและวางในหม้อ เติมน้ำสะอาด 3 ช้อนโต๊ะ ปิดฝา				
สตูว์ (เย็น)	400 กรัม	600 วัตต์	5-6	1-2	หม้อ + ฝาปิด
	คำแนะนำ ใส่สตูว์ในหม้อหนึ่ง ปิดฝา คนให้ทั่วก่อนพักอาหาร				

อาหาร	สัดส่วน	ระดับพลังงาน	เวลาปรุง (นาที)	เวลาพักอาหาร (นาที)	การประกอบ
ซูป (เย็น)	400 กรัม	800 วัตต์	3-4	1-2	หม้อ + ฝาปิด
	คำแนะนำ เทลงในหม้อหนึ่ง ปิดฝา คนให้ทั่วก่อนพักอาหาร				
ซูปแช่แข็ง	400 กรัม	800 วัตต์	8-10	2-3	หม้อ + ฝาปิด
	คำแนะนำ ใส่ซูปแช่แข็งในหม้อหนึ่ง ปิดฝา คนให้ทั่วก่อนพักอาหาร				
ขนมปังยีสต์ใส่แยมแช่แข็ง	150 กรัม	600 วัตต์	1-2	2-3	หม้อ + ฝาปิด
	คำแนะนำ พรมน้ำเย็นที่ด้านบนของอาหาร วางอาหารแช่แข็ง 1-2 ชิ้นเคียงข้างกันในหม้อหนึ่ง ปิดฝา				
ผลไม้แช่แข็ง	250 กรัม	800 วัตต์	3-4	2-3	หม้อ + ฝาปิด
	คำแนะนำ ซึ่งน้ำหนักผลไม้สด (เช่น แอปเปิ้ล แพร์ พลัม แอปปรicot มะม่วง หรือสับปะรด) หลังจากปอกเปลือก ล้างและหั่นเป็นชิ้นเท่าๆ กัน ใส่ลงในหม้อหนึ่ง เติมน้ำ 1-2 ช้อนโต๊ะ และน้ำตาล 1-2 ช้อนชา ปิดฝา				

การใช้งานหม้อหนึ่ง

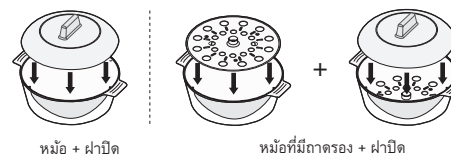

ข้อควรระวัง:

- ใช้ความระมัดระวังเมื่อเปิดฝาหม้อหนึ่ง เนื่องจากไอน้ำที่ออกมาอาจมีความร้อนจัด
- ใช้ถุงมือกันความร้อนเมื่อนำออกจากเตา

 
การใช้จานอบเกรียม

(เฉพาะรุ่น MG23F301EC*, MG23F301EJ*, MG23F302EC*, MG23F302EJ* เท่านั้น)

คุณสามารถใช้จานอบเกรียมนี้เพื่อทำอาหารเหลือเกรียม ไม่เพียงเฉพาะด้านบน แต่ยังรวมถึงด้านล่างของอาหารที่กรอบเหลืองด้วยอุณหภูมิของจานอบเกรียม คุณสามารถรอบอาหารหลากหลายชนิดด้วยจานอบเกรียมนี้ ดังที่จะแสดงในตาราง (ดูหน้าถัดไป)

จานอบเกรียมนี้ยังใช้ได้กับเบคอน ไข่ ไส้กรอก อีกด้วย

1. วางจานอบเกรียมไว้บนจานหมุน และอุ่นด้วยโหมดผสม Microwave-Grill (ไมโครเวฟ + ย่าง) ความร้อนสูงสุด [600 วัตต์ + ย่าง (🔥👉👉)] ตามเวลาและคำแนะนำที่แสดงในตาราง



- ☑️ โปรดใช้ถุงมือกันความร้อนเสมอเมื่อจับจานสำหรับอบเกรียม เนื่องจากจานนี้จะร้อนจัด

 
2. ทำน้ำมันจาน ถ้าต้องการทำอาหารเช่นเบคอนและไข่ดาว เพื่อให้อาหารสุกเกรียมนำรับประทาน

- ☑️ โปรดทราบว่าจานอบเกรียมนี้มีชั้นของเทฟลอน ซึ่งจะไม่ทนต่อการขีดข่วน โปรดอย่าใช้ของมีคมเช่นมีดเพื่อตัดอาหารบนจานอบเกรียม

- ☑️ ใช้อุปกรณ์พลาสติกเพื่อไม่ให้มีรอยขีดข่วนผิวหน้าของจานอบเกรียม หรือนำอาหารออกจากจานก่อนที่จะตัดหรือหั่น


3. วางอาหารบนจานอบเกรียม

- ☑️ โปรดอย่าวางภาชนะที่ไม่ทนความร้อนบนจานอบเกรียม (เช่น ขามพลาสติก เป็นต้น)



- ☑️ ห้ามวางจานอบเกรียมโดยไม่ใช้จานหมุนเด็ดขาด

 4. วางจานอบเกรียมไว้บนตะแกรงโลหะ (หรือจานหมุน) ในไมโครเวฟ



5. เลือกเวลาในการอบและพลังงานที่เหมาะสม (โปรดดูข้อมูลในตารางด้านข้าง)

- ☑️ วิธีทำความสะอาดจานอบเกรียม

ทำความสะอาดจานอบเกรียมด้วยน้ำอุ่นและน้ำยาล้างจาน จากนั้นล้างออกด้วยน้ำสะอาด

- ☑️ ห้ามใช้แปรงขัดหรือฟองน้ำที่แข็งหยาบเกินไป เนื่องจากจะทำให้ผิวหน้าของจานเสียหาย

โปรดทราบ

จานอบเกรียมนี้ไม่เหมาะกับเครื่องล้างจานอัตโนมัติ

โปรแกรมการอบแบบกรอด้วยตนเอง

ขอแนะนำให้อุ่นจานอบเกรียมบนจานหมุนโดยตรง

อุ่นจานอบเกรียมด้วยฟังก์ชัน 600 วัตต์ + ย่าง (🔥👉👉) เป็นเวลา 3-5 นาที

ใช้เวลาและคำแนะนำที่ปรากฏอยู่ในตาราง

อาหาร	สัดส่วน	ระดับพลังงาน	เวลาอุ่น (นาที)	เวลาปรุง (นาที)
เบคอน	4 ชิ้น (80 กรัม)	600 วัตต์ + ย่าง 🔥👉👉	3	3½-4
	<p>< คำแนะนำ ></p> <p>อุ่นจานอบเกรียม วางแผ่นเบคอนเรียงบนจานอบเกรียม นำจานอบเกรียมไปวางบนตะแกรง</p>			
มะเขือเทศย่าง	200 กรัม (2 ชิ้น)	450 วัตต์ + ย่าง 🔥👉👉	3	4½-5
	<p>< คำแนะนำ ></p> <p>อุ่นจานอบเกรียม หั่นครึ่งมะเขือเทศ ใส่ชีสที่ด้านบน วางอาหารเป็นวงกลมบนจานอบเกรียม นำจานอบเกรียมไปวางบนตะแกรง</p>			
เบอร์เกอร์ (แช่แข็ง)	2 ชิ้น (125 กรัม)	600 วัตต์ + ย่าง 🔥👉👉	3	7-7½
	<p>< คำแนะนำ ></p> <p>อุ่นจานอบเกรียม วางเบอร์เกอร์แช่แข็งเป็นวงกลมบนจานอบเกรียม นำจานอบเกรียมไปวางบนตะแกรง กลับด้านหลังจากผ่านไป 4-5 นาที</p>			
บาแกตต์ (แช่แข็ง)	200-250 กรัม (2 ชิ้น)	450 วัตต์ + ย่าง 🔥👉👉	4	8-9
	<p>< คำแนะนำ ></p> <p>อุ่นจานอบเกรียม วางบาแกตต์โดยไม่ให้อยู่กึ่งกลางของจานอบเกรียม ให้วางบาแกตต์ 2 ชิ้นคู่กันบนจานอบเกรียม วางจานอบเกรียมบนตะแกรง</p>			


อาหาร	สัดส่วน	ระดับพลังงาน	เวลาอุ่น (นาที)	เวลาปรุง (นาที)
พิซซ่า (แช่แข็ง)	300-350 กรัม	600 วัตต์ + ย่าง ☀️/UP	4	9-10
	< คำแนะนำ >			
	อุ่นจานอบเกรียม วางพิซซ่าแช่แข็งบนจานอบเกรียม นำจานอบเกรียมไปวางบนตะแกรง			
มันฝรั่งอบ	250 กรัม	600 วัตต์ + ย่าง ☀️/UP	3	5-6
	500 กรัม			8-9
	< คำแนะนำ >			
	อุ่นจานอบเกรียม หั่นครึ่งมันฝรั่ง วางบนจานอบเกรียมโดยให้ด้านที่หันอยู่ข้างล่าง วางเรียงเป็นวงกลม วางจานบนตะแกรง			
พิซซ่าฟองเกอร์ (แช่แข็ง)	150 กรัม (5 ชิ้น) 300 กรัม (10 ชิ้น)	600 วัตต์ + ย่าง ☀️/UP	4	7-8 9-10
	< คำแนะนำ >			
	อุ่นจานอบเกรียม ทาจานด้วยน้ำมัน 1 ช้อนโต๊ะ วางพิซซ่าฟองเกอร์เป็นวงกลมบนจานอบเกรียม พลิกกลับด้านหลังจาก 4 นาที (5 ชิ้น) หรือ 6 นาที (10 ชิ้น)			
นั้กเก็ตไก่ (แช่แข็ง)	125 กรัม 250 กรัม	600 วัตต์ + ย่าง ☀️/UP	4	5-5½ 7½-8
	< คำแนะนำ >			
	อุ่นจานอบเกรียม ทาจานด้วยน้ำมัน 1 ช้อนโต๊ะ วางนั้กเก็ตไก่บนจาน นำจานอบเกรียมไปวางบนตะแกรง พลิกกลับด้านหลังจากผ่านไป 3 นาที (125 กรัม) หรือ 5 นาที (250 กรัม)			

อาหาร	สัดส่วน	ระดับพลังงาน	เวลาอุ่น (นาที)	เวลาปรุง (นาที)
พิซซ่า (เย็น)	300-350 กรัม	450 วัตต์ + ย่าง ☀️/UP	4	6½-7½
	< คำแนะนำ >			
	อุ่นจานอบเกรียม วางพิซซ่าเย็นบนจาน วางจานอบเกรียมบนตะแกรง			

การเลือกอุปกรณ์เสริม

ใช้ภาชนะที่เหมาะสมสำหรับไมโครเวฟ อย่าใช้ภาชนะพลาสติก จาน ถ้วยกระดาษ กระดาษ เช็ดปาก เป็นต้น

 หากคุณต้องการเลือกการอบแบบผสม (ไมโครเวฟและย่าง) โปรดใช้ภาชนะที่เหมาะสมสำหรับเตาไมโครเวฟและเตาอบเท่านั้น ภาชนะหรือเครื่องใช้ที่เป็นโลหะจะทำให้เตาอบเสียหาย




 โปรดดูรายละเอียดเพิ่มเติมเกี่ยวกับภาชนะหรือเครื่องใช้ที่เหมาะสมในคู่มือสำหรับอุปกรณ์การทำอาหารที่หน้า 22


การย่าง

การย่างช่วยให้คุณอุ่นและทำให้อาหารเกรียมได้อย่างรวดเร็ว โดยไม่ต้องใช้ไมโครเวฟ เรามีตะแกรงย่างมาให้พร้อมกับเตาไมโครเวฟเพื่อวัตถุประสงค์นี้

 1. อุ่นเตาอบด้วยการย่างให้มีอุณหภูมิเหมาะสม โดยกดปุ่ม **ควบคุมกำลังไฟในการปรุงอาหาร** ไปที่สัญลักษณ์ **ย่าง** และตั้งเวลาอุ่นด้วยการหมุนปุ่ม **ตั้งเวลาน้ำหนัก** (☉/9) ให้เหมาะสม




 
2. เปิดประตู วางอาหารบนตะแกรง และวางตะแกรงบนจานหมุน ปิดประตู




3. กำหนดเวลาโดยหมุนปุ่ม ตั้งเวลาห้าหลัก (๐/9)

 
- ผลลัพธ์:** ไฟของเตาอบจะสว่างขึ้น และจานหมุนจะเริ่มหมุน
- เตาอบจะเริ่มต้มน้ำร้อนอบอาหาร เมื่อเสร็จแล้วก็จะส่งสัญญาณเตือน 4 ครั้ง
 - เตาอบจะส่งสัญญาณเตือน 3 ครั้ง (นาฬิกาจะติ๊ก)
 - เวลาปัจจุบันจะปรากฏขึ้นอีกครั้ง



 โปรดอย่ากังวลถ้าขดลวดความร้อนเปิดและปิดสลับกันระหว่างการย่าง ระบบนี้ได้รับการออกแบบมาเพื่อป้องกันเตาอบร้อนเกินไป



 โปรดใช้ถุงมือกันความร้อนทุกครั้งที่สัมผัสภาชนะในเตาอบ เนื่องจากภาชนะเหล่านี้จะร้อนจัดให้ขดลวดความร้อนอยู่ในตำแหน่งแนวนอน

 ห้ามใช้งานโหมด ย่าง (U) / ผสม (๕๕๕-U) กับหม้อหนึ่ง


โหมดการทำงาน	ไมโครเวฟ (๕๕๕)	ย่าง (U) / ผสม (๕๕๕-U)
 (หม้อหนึ่ง)	O	X

การใช้ไมโครเวฟผสมการย่าง


คุณสามารถใช้ไมโครเวฟร่วมกับการย่าง เพื่อให้อาหารสุกเร็ว และเหลืองเกรียมในขณะเดียวกัน

-  โปรดใช้ภาชนะและเครื่องครัวที่ใช้กับไมโครเวฟและเตาอบ จานแก้วหรือกระเบื้องจะเหมาะสมที่สุด เนื่องจากจะช่วยให้ไมโครเวฟเข้าสู่อาหารทั่วถึงกัน
-  โปรดใช้ถุงมือกันความร้อนทุกครั้งที่สัมผัสภาชนะในเตา เนื่องจากภาชนะเหล่านี้จะร้อนจัด

 - เปิดประตู วางอาหารบนตะแกรง และวางตะแกรงบนจานหมุน ปิดประตู



 
- ปิดปุ่ม ควบคุมกำลังไฟในการปรุงอาหาร ไปที่กำลังไฟที่เหมาะสม



3. กำหนดเวลาโดยหมุนปุ่ม ตั้งเวลาห้าหลัก (๐/9)


ผลลัพธ์: ไฟของเตาอบจะสว่างขึ้น และจานหมุนจะเริ่มหมุน

 - เตาอบจะเริ่มต้มน้ำร้อนอบอาหาร เมื่อเสร็จแล้วก็จะส่งสัญญาณเตือน 4 ครั้ง
- เตาอบจะส่งสัญญาณเตือน 3 ครั้ง (นาฬิกาจะติ๊ก)
- เวลาปัจจุบันจะปรากฏขึ้นอีกครั้ง



 พลังงานไมโครเวฟสูงสุดสำหรับโหมดผสมไมโครเวฟและย่างคือ 600 วัตต์

 ห้ามใช้งานโหมด ย่าง (U) / ผสม (๕๕๕-U) กับหม้อหนึ่ง

โหมดการทำงาน	ไมโครเวฟ (๕๕๕)	ย่าง (U) / ผสม (๕๕๕-U)
 (หม้อหนึ่ง)	O	X

คู่มือสำหรับอุปกรณ์การทำอาหาร

ในการอบอาหารด้วยเตาไมโครเวฟ คลื่นไมโครเวฟจะต้องสามารถแทรกเข้าสู่อาหาร โดยไม่มีการสะท้อนหรือดูดซับโดยภาชนะ

คุณจึงควรเลือกใช้อุปกรณ์อย่างรอบคอบ คุณควรเลือกภาชนะที่มีข้อความหรือเครื่องหมายว่าใช้กับไมโครเวฟได้ ตารางต่อไปนี้แสดงอุปกรณ์การทำอาหารประเภทต่างๆ และระบุว่าสามารถใช้กับเตาไมโครเวฟได้หรือไม่ และอย่างไร

อุปกรณ์	ใช้กับไมโครเวฟได้	หมายเหตุ
ฟอยล์อะลูมิเนียม	✓ X	สามารถใช้จำนวนเล็กน้อย เพื่อป้องกันส่วนที่ไม่ต้องการให้สุกเกินไป อาจมีประกายไฟ ถ้าฟอยล์อยู่ใกล้กับผนังของเตาอบมากเกินไป หรือใช้ฟอยล์มากเกินไป
จานสำหรับทำเกี๊ยว	✓	ห้ามอุ่นร้อนเกินกว่าแปดนาที
กระเบื้องและดินเผา	✓	กระเบื้องพอร์ซเลน ดินเผา ดินเผาเคลือบ และกระเบื้องเคลือบนั้นมักจะใช้ได้ดี ยกเว้นที่มีขอบโลหะ
จานโฟมหรือกระดาษแบบใช้แล้วทิ้ง	✓	อาหารแช่แข็งบางชนิดจะบรรจุในภาชนะประเภทนี้
บรรจุภัณฑ์ของอาหาร จานด่วน		
• ด้วยโฟม	✓	สามารถใช้อุ่นอาหาร ความร้อนสูงมากๆ จะทำให้โฟมละลาย
• กระจกตะกั่วหรือหนังสือพิมพ์	X	อาจติดไฟ
• กระดาษรีไซเคิลหรือขอบโลหะ	X	อาจเกิดประกายไฟ
เครื่องแก้ว		
• ภาชนะสำหรับเตาอบและใส่อาหาร	✓	ใช้ได้ หากไม่ประดับด้วยขอบโลหะ

อุปกรณ์	ใช้กับไมโครเวฟได้	หมายเหตุ
• เครื่องแก้วบาง	✓	สามารถใช้อุ่นอาหารหรือของเหลว แก้วที่บางมากอาจแตกหรือร้าวหากได้รับความร้อนทันที
• โถแก้ว	✓	ต้องใช้โดยไม่ปิดฝา เหมาะสำหรับการอุ่นอาหารเท่านั้น
โลหะ		
• จาน	X	อาจเกิดประกายหรือติดไฟ
• ลวดสำหรับมัดปากถุงแช่แข็ง	X	
กระดาษ		
• จาน ด้วย กระดาษเช็ดปาก และกระดาษเช็ดมือ	✓	สำหรับกรอบเวลาสั้นๆ และการอุ่นอาหาร และใช้ซับของเหลวที่มากเกินไป
• กระดาษรีไซเคิล	X	อาจเกิดประกายไฟ
พลาสติก		
• ภาชนะ	✓	โดยเฉพาะพลาสติกทนความร้อน พลาสติกชนิดอื่นอาจบิดหรือเปลี่ยนสีเมื่อโดนความร้อนสูง ห้ามใช้พลาสติกแบบเมลามีน
• พลาสติกสำหรับปิดอาหาร	✓	สามารถใช้เก็บรักษาความชื้น ไม่ควรสัมผัสกับอาหารโดยตรง ใช้ความระมัดระวังขณะนำฟิล์มออก เนื่องจากอาจมีไอร้อนออกมาด้วย
• ถุงแช่แข็ง	✓ X	เฉพาะชนิดที่พิมพ์ได้หรือใช้กับเตาอบได้ ไม่ควรเป็นแบบกักอากาศ ซึ่งต้องใช้ส้อมเจาะก่อน ถ้าจำเป็นต้องใช้
กระดาษมันหรือกระดาษไข	✓	สามารถใช้เก็บรักษาความชื้นหรือกันอาหารกระเด็น

✓ : แนะนำ

✓ X : ใช้อย่างระมัดระวัง

X : ไม่ปลอดภัย

คู่มือการอบอาหาร

ไมโครเวฟ

พลังงานไมโครเวฟจะแทรกซึมในอาหาร โดยจะมีการดูดซับโดยน้ำ ไขมัน และน้ำตาลในอาหาร ไมโครเวฟทำให้โมเลกุลของอาหารเคลื่อนไหวย่างรวดเร็ว การเคลื่อนไหวย่างรวดเร็วทำให้เกิดแรงเสียดทานของโมเลกุล และความร้อนจากแรงเสียดทานนี้ทำให้อาหารสุก

การอบ

ภาชนะสำหรับอบด้วยไมโครเวฟ:

ภาชนะที่ใช้จะต้องยอมให้พลังงานไมโครเวฟผ่าน เพื่อให้การอบมีประสิทธิภาพ คลื่นไมโครเวฟจะสะท้อนกับโลหะ เช่น สเตนเลส อะลูมิเนียม และทองแดง แต่สามารถแทรกซึมผ่านดินเผา แก้ว กระเบื้อง และพลาสติก เช่นเดียวกับกระดาษและไม่ห้ามอบอาหารในภาชนะโลหะเด็ดขาด

อาหารที่เหมาะสมสำหรับการอบด้วยไมโครเวฟ:

อาหารหลายชนิดเหมาะสำหรับการอบด้วยไมโครเวฟ เช่น ผัก ผลไม้ พาสต้า ข้าว ธัญพืช ถั่ว ปลา และเนื้อ ซึ่งแช่แข็ง หรือสด ซอส คัสตาร์ด ชุป พุดดิ้งอบ ของแห้งและของหมักดอง โดยทั่วไปแล้ว ไมโครเวฟเหมาะสำหรับการอบอาหารแทบทุกชนิดที่สามารถอบด้วยวิธีนี้ ตัวอย่างเช่น การละลายเนยหรือซอซโกกแล็ต (โปรตุเกสเคลือบ เทคนิค และคำแนะนำประกอบ)

การปิดหรือครอบอาหาร

การปิดหรือครอบอาหารระหว่างการอบเป็นสิ่งสำคัญ เนื่องจากน้ำจะกลายเป็นไอน้ำและมีผลต่อการอบอาหาร คุณสมบัตการอบอาหารได้หลายวิธีดังนี้ เช่น ใช้จานกระเบื้อง ฝาพลาสติก หรือฟิล์มปิดอาหารที่เหมาะสมกับไมโครเวฟ

เวลาพักอาหาร

เมื่อการอบอาหารเสร็จ เวลาพักอาหารจะช่วยให้อุ่นนุ่มในอาหารกระจายทั่วถึงกัน

คู่มือการอบอาหารสำหรับผักแช่แข็ง

ใช้อ่างแก้วทนไฟ (ไพเร็กซ์) ที่มีฝาปิด อบโดยปิดฝาและใช้เวลาให้น้อยที่สุด - โปรดดูในตาราง อบอุ่นต่อไปเพื่อให้ได้ผลลัพธ์ตามต้องการ

คณาหารสองครั้งระหว่างอบ และหนึ่งครั้งหลังการอบ เติมน้ำเกลือ เครื่องเทศ หรือเนยหลังการอบ ปิดฝาดูจนผักอาหาร

อาหาร	สัดส่วน	ระดับพลังงาน	เวลา (นาที)	เวลาพักอาหาร (นาที)	คำแนะนำ
ผักขม	150 กรัม	600 วัตต์	4½-5½	2-3	เติมน้ำเย็น 15 มล. (1 ช้อนโต๊ะ)
บร็อคโคลี่	300 กรัม	600 วัตต์	9-10	2-3	เติมน้ำเย็น 30 มล. (2 ช้อนโต๊ะ)
ถั่ว	300 กรัม	600 วัตต์	7½-8½	2-3	เติมน้ำเย็น 15 มล. (1 ช้อนโต๊ะ)
ถั่วเขียว	300 กรัม	600 วัตต์	8-9	2-3	เติมน้ำเย็น 30 มล. (2 ช้อนโต๊ะ)
ผักรวม (แครอท/ถั่ว/ธัญพืช)	300 กรัม	600 วัตต์	7½-8½	2-3	เติมน้ำเย็น 15 มล. (1 ช้อนโต๊ะ)
ผักรวม (แบบจีน)	300 กรัม	600 วัตต์	8-9	2-3	เติมน้ำเย็น 15 มล. (1 ช้อนโต๊ะ)

คู่มือการปรุงอาหารสำหรับข้าวและพาสต้า

- ข้าว:** ใช้ข้าวแก้วไฟเร็กซ์ขนาดใหญ่ที่มีฝาปิด ข้าวจะมีปริมาณเพิ่มเป็นสองเท่าเมื่อหุงสุกแล้ว อบโดยปิดฝา เมื่อหมดเวลาอบ คนให้ทั่วก่อนพักอาหาร และเติมเกลือหรือเครื่องเทศและเนยตามต้องการ
หมายเหตุ: ข้าวอาจไม่ดูดซับน้ำทั้งหมด หลังจากทั้งหมดเวลาอบแล้ว
- พาสต้า:** ใช้ข้าวแก้วไฟเร็กซ์ขนาดใหญ่ เติมน้ำร้อน เกลือเล็กน้อย และคนให้ทั่ว อบโดยปิดฝาคคนเป็นระยะระหว่างและหลังการอบ ปิดฝาคขณะพักอาหาร และเทน้ำออกให้หมดหลังจากนั้น

อาหาร	สัดส่วน	ระดับพลังงาน	เวลา (นาที)	เวลาพักอาหาร (นาที)	คำแนะนำ
ข้าวสวย (หุงพอสุก)	250 กรัม	800 วัตต์	16-17	5	เติมน้ำเย็น 500 มล.
ข้าวกล้อง (หุงพอสุก)	250 กรัม	800 วัตต์	21-22	5	เติมน้ำเย็น 500 มล.
ข้าวผสม (ข้าวขาว + ข้าวซ้อมมือ)	250 กรัม	800 วัตต์	17-18	5	เติมน้ำเย็น 500 มล.
ธัญพืชผสม (ข้าว + ธัญพืช)	250 กรัม	800 วัตต์	18-19	5	เติมน้ำเย็น 400 มล.
พาสต้า	250 กรัม	800 วัตต์	11-12	5	เติมน้ำร้อน 1000 มล.

คู่มือการปรุงอาหารสำหรับผักสด

ใช้อ่างแก้วทนไฟ (ไฟเร็กซ์) ที่มีฝาปิด เติมน้ำเย็น 30-45 มล. (2-3 ช้อนโต๊ะ) สำหรับน้ำหนัก 250 กรัม นอกจากนี้คำแนะนำเป็นอย่างอื่น - โปรดดูในตาราง อบโดยปิดฝาและใช้เวลาน้อยที่สุด - โปรดดูในตาราง อบต่อไปเพื่อให้ผลลัพธ์ตามต้องการ คนหนึ่งครั้งระหว่างและหลังการอบ เติมเกลือ เครื่องเทศ หรือเนยหลังการอบ ปิดฝาคขณะพักอาหารเป็นเวลา 3 นาที

คำแนะนำ: หั่นผักสดออกเป็นชิ้นเท่าๆ กัน ผักชิ้นเล็กจะใช้เวลาน้อยกว่า

ผักสดทุกประเภทควรอบโดยใช้พลังงานไมโครเวฟเต็มที่ (800 วัตต์)

อาหาร	สัดส่วน	เวลา (นาที)	เวลาพักอาหาร (นาที)	คำแนะนำ
บร็อกโคลี่	250 กรัม 500 กรัม	4-4½ 7-7½	3	หั่นเป็นชิ้นขนาดเท่ากัน วางส่วนก้านไว้ตรงกลาง
กะหล่ำปลีรัสเซล	250 กรัม	5½-6½	3	เติมน้ำ 60-75 มล. (4-5 ช้อนโต๊ะ)
แครอท	250 กรัม	4½-5	3	ผ่านแครอทเป็นชิ้นเท่าๆ กัน
ดอกกะหล่ำ	250 กรัม 500 กรัม	5-5½ 8½-9	3	หั่นเป็นชิ้นขนาดเท่ากัน หั่นแบ่งชิ้นขนาดใหญ่เป็นครึ่ง วางส่วนก้านไว้ตรงกลาง
ซูกินี	250 กรัม	3½-4	3	ผ่านเป็นชิ้นบางๆ เติมน้ำ 30 มล. (2 ช้อนโต๊ะ) หรือเนย อบให้นุ่ม
มะเขือม่วง	250 กรัม	3½-4	3	ผ่านมะเขือออกเป็นชิ้นบางๆ และเติมน้ำมันวหนึ่งช้อนโต๊ะ
กระเทียมต้น	250 กรัม	4½-5	3	หั่นเป็นชิ้นค่อนข้างหนา
เห็ด	125 กรัม 250 กรัม	1½-2 3-3½	3	เตรียมเห็ดหัวเล็กทั้งหัว หรือหัวใหญ่ผ่านเป็นแว่นอย่าเติมน้ำ ให้บีบน้ำมะนาวเล็กน้อย โรยเกลือ และพริกไทย เทน้ำออกก่อนรับประทาน
หัวหอม	250 กรัม	5½-6	3	ผ่านหัวหอมเป็นแว่น หรือหั่นครึ่ง เติมน้ำ 15 มล. (1 ช้อนโต๊ะ)
พริกหยวก	250 กรัม	4½-5	3	หั่นเป็นชิ้นบางๆ

อาหาร	สัดส่วน	เวลา (นาที)	เวลาพักอาหาร (นาที)	คำแนะนำ
มันฝรั่ง	250 กรัม 500 กรัม	4-5 7½-8½	3	ซังน้ำหมักมันฝรั่งที่ปอกแล้ว และหันครึ่งหรือสี่ส่วน เป็นชิ้นเท่าๆ กัน
หัวผักกาด	250 กรัม	5-5½	3	หันเป็นชิ้นสี่เหลี่ยมลูกเต๋ายาวขนาดเล็ก

การอุ่น

เตาไมโครเวฟของคุณสามารถอุ่นอาหารโดยใช้เวลาเพียงเสี้ยวของการอุ่นด้วยเตาอบแบบเก่าหรือลังถึง ใช้ระดับพลังงานและเวลาในการอุ่นตามแผนผังต่อไปนี้ เวลาในแผนผังนี้ใช้กับอาหารที่เป็นของเหลว และมีอุณหภูมิปกติคือประมาณ +18 ถึง +20°C หรืออาหารแช่เย็นที่มีอุณหภูมิ +5 ถึง +7 °C

การจัดวางและการปิดครอบ

ไม่ควรอุ่นอาหารที่มีขนาดใหญ่ เช่น ก้อนเนื้อ เนื่องจากอาหารจะสุกและแห้งจนเกินไปก่อนที่ส่วนกลางจะร้อน การอุ่นอาหารที่เป็นชิ้นเล็กๆ จะได้ผลดีกว่า

ระดับพลังงานและการคน

อาหารบางอย่างสามารถอุ่นได้โดยใช้พลังงาน 800 วัตต์ แต่อาหารบางอย่างควรอุ่นโดยใช้พลังงาน 600 วัตต์, 450 วัตต์ หรือ 300 วัตต์

โปรดดูตารางต่อไปนี้เป็นแนวทาง โดยทั่วไป คุณควรอุ่นอาหารโดยใช้ระดับพลังงานต่ำ หากอาหารนั้นละเอียดอ่อน มีปริมาณมาก หรือถ้าเป็นอาหารชนิดที่ร้อนเร็ว (เช่น พาย เนื้อสับ เป็นต้น) คนให้ทั่ว หรือกลับด้านระหว่างการอุ่นอาหาร เพื่อให้ได้ผลดีที่สุด ถ้าเป็นไปได้ ควรคนอีกครั้งก่อนรับประทาน ใช้ความระมัดระวังเป็นพิเศษเมื่ออุ่นอาหารเหลวและอาหารสำหรับทารก เพื่อป้องกันการเดือดและกระเด็น ซึ่งอาจทำให้อาหารลวกมือ คุณควรคนอาหารก่อน ระหว่าง และหลังการอุ่น ป้อนทิ้งไว้ในเตาไมโครเวฟขณะพักอาหาร ขอแนะนำให้คุณใส่ช้อนพลาสติกหรือแท่งกวนในอาหารที่เป็นของเหลว ระมัดระวังอาหารร้อนเกินไป (ซึ่งจะทำให้เสียรสชาติ) ขอแนะนำให้คุณประมาณเวลาอบให้น้อยลง และเพิ่มเวลาในการอุ่นอาหาร ถ้าจำเป็น

เวลาในการอุ่นและพักอาหาร

เมื่ออุ่นอาหารเป็นครั้งแรก คุณควรบันทึกเวลาที่ใช้ในการอุ่นไว้ เพื่อใช้ประโยชน์ในอนาคต โปรดอุ่นอาหารให้เดือดทั่วทุกครั้งที่พักอาหารไว้ชั่วขณะหลังจากการอุ่น เพื่อให้อุณหภูมิสม่ำเสมอทั่วทั้งชิ้น เวลาพักอาหารที่เหมาะสมสำหรับการอุ่นก็คือ 2-4 นาที นอกจากนี้คำแนะนำเป็นอย่างไรในแผนผังใช้ความระมัดระวังเป็นพิเศษเมื่ออุ่นอาหารเหลวและอาหารสำหรับทารก โปรดอ่านข้อมูลเพิ่มเติมในเรื่องข้อควรระวังเพื่อความปลอดภัย

การอุ่นของเหลว

กำหนดเวลาพักอาหารอย่างน้อย 20 วินาทีหลังจากที่ปิดเตาอบทุกครั้ง เพื่อให้มีการปรับอุณหภูมิ คนอาหารระหว่างให้ความร้อนถ้าจำเป็น และคนทุกครั้งหลังจากอุ่น เพื่อป้องกันการเดือดกระเด็นและอันตรายจากน้ำร้อนลวก โปรดใส่ช้อนหรือแท่งกวนในเครื่องต้ม และคนก่อน ระหว่าง และหลังการอุ่น

การอุ่นของเหลวและอาหาร

ใช้ระดับพลังงานและเวลาในการอุ่นตามแผนผังต่อไปนี้

อาหาร	สัดส่วน	ระดับพลังงาน	เวลา (นาที)	เวลาพักอาหาร (นาที)	คำแนะนำ
เครื่องต้ม (กาแฟ ชา และน้ำ)	150 มล. (1 ถ้วย) 250 มล. (1 แก้ว)	800 วัตต์	1-1½ 1½-2	1-2	เทในถ้วยและอุ่นโดยไม่ปิดฝา วางถ้วย 150 มล. หรือแก้ว 250 มล. และวางตรงกึ่งกลางจานหมุน คนอย่างระมัดระวังก่อนและหลังเวลาพักอาหาร
ซูป (เย็น)	250 กรัม	800 วัตต์	3-3½	2-3	เทใส่จานกระเบื้องก้นลึก ครอบด้วยฝาพลาสติก คนให้ทั่วหลังการอุ่น คนอีกครั้งก่อนรับประทาน
สตูว์ (เย็น)	350 กรัม	600 วัตต์	5½-6½	2-3	เทสตูว์ในจานกระเบื้องก้นลึก ครอบด้วยฝาพลาสติก คนเป็นระยะระหว่างการอุ่น และคนอีกครั้งก่อนพักอาหารและรับประทาน
พาสต้าราดซอส (เย็น)	350 กรัม	600 วัตต์	4½-5½	3	ใส่พาสต้า (เช่น สปาเก็ตตี้หรือบะหมี่ไข่) ในจานกระเบื้องแบน ปิดด้วยฟิล์มสำหรับไมโครเวฟ คนก่อนรับประทาน

อาหาร	สัดส่วน	ระดับพลังงาน	เวลา (นาที)	เวลาพักอาหาร (นาที)	คำแนะนำ
พาสต้ามีไส้ราดซอส (เย็น)	350 กรัม	600 วัตต์	5-6	3	วางพาสต้าแบบมีไส้ (เช่น ราวิโอลี ทอร์เทลลินี) ในจาน กระเบื้องกันลื่น ครอบด้วย ฝาพลาสติก คนเป็นระยะ ระหว่างการอุ่น และคนอีก ครั้งก่อนพักอาหารและรับ ประทาน
อาหารซูด (เย็น)	350 กรัม	600 วัตต์	5¼-6¼	3	จัดอาหารซูดซึ่งมีส่วน ประกอบแช่เย็น 2-3 อย่าง ในจานกระเบื้อง ปิดด้วย ฟิล์มสำหรับไมโครเวฟ

การอุ่นอาหารสำหรับทารก

อาหารสำหรับทารก: เทใส่จานกระเบื้องกันลื่น ครอบด้วยฝาพลาสติก คนให้ทั่วหลังการอุ่น
พักอาหารเป็นเวลา 2-3 นาทีที่อุณหภูมิห้อง คนอีกครั้ง และตรวจสอบอุณหภูมิ อุณหภูมิที่แนะนำในการป้อน: ระหว่าง
30-40 °C

นมสำหรับทารก: เทนมในขวดแก้วที่ทำความสะอาดแล้ว อุ่นโดยไม่ปิดฝา ห้ามอุ่นขวดนมเด็กโดยปิดจุกนมไว้
เนื่องจากขวดอาจจะระเบิดเมื่อได้รับความร้อนสูง เขย่าก่อนพักอาหาร และเขย่าอีกครั้งก่อนนำไปป้อนทารก ทุกครั้ง จะต้อง
ตรวจสอบอุณหภูมิของอาหารหรือนมสำหรับทารกก่อนที่จะนำไปป้อน อุณหภูมิที่แนะนำในการป้อน: ประมาณ 37 °C
หมายเหตุ: โปรดตรวจสอบอุณหภูมิของอาหารสำหรับทารกอย่างละเอียดก่อนที่จะนำไปป้อน เพื่อป้องกันการอาหารร้อน
ลวก ใช้ระดับพลังงานและเวลาในการอุ่นตามแผนผังต่อไปนี้

การอุ่นอาหารและนมสำหรับทารก

ใช้ระดับพลังงานและเวลาในการอุ่นตามแผนผังต่อไปนี้

อาหาร	สัดส่วน	ระดับพลังงาน	เวลา	เวลาพักอาหาร (นาที)	คำแนะนำ
อาหารสำหรับทารก (ผัก + เนื้อสัตว์)	190 กรัม	600 วัตต์	30 วินาที	2-3	เทใส่จานกระเบื้องกันลื่น อบโดยปิดฝา คนอาหาร หลังการอบ พักอาหารเป็น เวลา 2-3 นาที คนให้ทั่ว ก่อนนำไปป้อน และตรวจ สอบอุณหภูมิอย่างละเอียด
โจ๊กสำหรับทารก (ธัญพืช + นม + ผลไม้)	190 กรัม	600 วัตต์	20 วินาที	2-3	เทใส่จานกระเบื้องกันลื่น อบโดยปิดฝา คนอาหาร หลังการอบ พักอาหารเป็น เวลา 2-3 นาที คนให้ทั่ว ก่อนนำไปป้อน และตรวจ สอบอุณหภูมิอย่างละเอียด
นมสำหรับทารก	100 มล. 200 มล.	300 วัตต์	30-40 วินาที 50 วินาทีถึง 1 นาที	2-3	เขย่าหรือคนให้ทั่ว และ เทลงในขวดแก้วที่ฆ่าเชื้อ แล้ว วางตรงกลางของจาน หมุน อบโดยไม่ปิดฝา คน ให้ทั่วและพักอาหารอย่าง น้อย 3 นาที คนให้ทั่วก่อน รับประทาน และตรวจสอบ อุณหภูมิอย่างละเอียด

ละลายน้ำแข็ง (เวลา)

ไมโครเวฟเป็นวิธีการละลายอาหารแช่แข็งที่ดียิ่งเยี่ยม เนื่องจากจะค่อยๆ ละลายอาหารแช่แข็งได้ภายในเวลาอันสั้น ซึ่งจะมีประโยชน์เป็นอย่างมาก หากมีแขกมาเยี่ยมเยียนโดยไม่ได้เตรียมตัว

ไก่แช่แข็งจะต้องได้รับการละลายน้ำแข็งทั่วทั้งตัว ก่อนที่จะสามารถนำไปอบอาหาร น้ำที่รัดซึ่งเป็นโลหะออก และนำอาหารออกจากวัสดุห่อหุ้ม เพื่อให้ให้น้ำซึ่งจะละลายสามารถไหลออกมาจากอาหาร

วางอาหารแช่แข็งในจานโดยไม่มีฝาครอบ กลับด้านหนึ่งครั้ง เทของเหลวออก และนำเครื่องในออกโดยเร็วที่สุด

ตรวจสอบอาหารเป็นระยะ เพื่อให้ไม่ให้อุ่นจนเกินไป

หากส่วนที่มีขนาดเล็กหรือบางของอาหารแช่แข็งเริ่มอุ่น คุณสามารถหั่นส่วนเหล่านั้นด้วยฟอยล์อะลูมิเนียมชิ้นเล็กๆ ระหว่างการละลายน้ำแข็ง

ถ้าเปิดไก่เริ่มอุ่นที่ผิวหนัง ให้นำฟอยล์ละลายน้ำแข็ง เพื่อให้เป็นการพักอาหาร 20 นาที ก่อนที่จะดำเนินการต่อ

พักปลา เนื้อ และไก่ไว้สักครู่ เพื่อให้ให้น้ำแข็งละลายทั่วถึงกัน เวลาพักอาหารเพื่อละลายน้ำแข็งจะขึ้นอยู่กับปริมาณของอาหาร โปรดดูตารางต่อไปนี้

คำแนะนำ: อาหารที่มีลักษณะแบนจะละลายน้ำแข็งได้เร็วกว่า และปริมาณที่ไม่มากจะใช้เวลาน้อยกว่า โปรดนึกถึงคำแนะนำนี้ เมื่อแช่แข็งและละลายอาหาร

สำหรับการละลายอาหารแช่แข็งที่มีอุณหภูมิระหว่าง -18 ถึง -20 °C โปรดใช้ตารางด้านล่างเป็นแนวทาง

อาหารแช่แข็งทุกประเภทควรนำมาละลาย โดยใช้ระดับความร้อนสำหรับการละลายอาหารแช่แข็ง (180 วัตต์)

อาหาร	สัดส่วน	เวลา (นาที)	เวลาพักอาหาร (นาที)	คำแนะนำ
เนื้อ				
สับ	250 กรัม	6½-7½	5-25	วางเนื้อบนจานกระเบื้องแบบเรียบ หั่นส่วนที่บางด้วยฟอยล์อะลูมิเนียม กลับด้านเมื่อถึงครึ่งของเวลาละลายน้ำแข็ง
เนื้อวัว	500 กรัม	10-12		
เนื้อหมูเป็นชิ้น	250 กรัม	7½-8½		

อาหาร	สัดส่วน	เวลา (นาที)	เวลาพักอาหาร (นาที)	คำแนะนำ
เปิด ไก่				
ไก่เป็นชิ้น	500 กรัม (2 ชิ้น)	14½-15½	15-40	ชั้นแรก ให้วางไก่เป็นชั้นบนจานกระเบื้องแบบเรียบ โดยให้ด้านที่เป็นหนังอยู่ข้างล่าง ส่วนไก่ทั้งตัวให้อาบน้ำหน้าอกลง หั่นส่วนที่บางและเล็ก เช่น ปีก หรือก้นด้วยฟอยล์อะลูมิเนียม กลับด้านเมื่อถึงครึ่งของเวลาละลายน้ำแข็ง
ไก่ทั้งตัว	900 กรัม	28-30		
ปลา				
ชิ้นเนื้อปลา	200 กรัม (2 ชิ้น)	6-7	5-15	วางปลาแช่แข็งกลางจานกระเบื้องแบบเรียบ โดยให้ส่วนที่เล็กอยู่ใต้ส่วนที่หนากว่า หั่นส่วนที่บางด้วยฟอยล์อะลูมิเนียม กลับด้านเมื่อถึงครึ่งของเวลาละลายน้ำแข็ง
	400 กรัม (4 ชิ้น)	12-13		
ผลไม้				
เบอร์รี่	250 กรัม	6-7	5-10	วางผลไม้ให้กระจายบนจานแก้วกลมแบบเรียบ (และมีเส้นผ่าศูนย์กลางใหญ่)
ขนมปัง				
ขนมปังก่อน (ประมาณก่อนละ 50 กรัม)	2 ชิ้น 4 ชิ้น	½-1 2-2½	5-20	วางก้อนขนมปังเป็นวง หรือวางขนมปังแผ่นเป็นแนวบนจานกระเบื้องเซรามิกไว้กลางจานหมุน กลับด้านเมื่อถึงครึ่งของเวลาละลายน้ำแข็ง
ขนมปังแผ่นแซนด์วิช	250 กรัม	4½-5		
ขนมปังเยอร์มัน (แบ่งสาลี+ไรย์)	500 กรัม	8-10		

ย่าง

ขดลวดสำหรับการย่างอยู่บริเวณใต้ผนังด้านบนของเตาอบ และจะทำงานเมื่อเปิดประตูและจานหมุนทำงาน การหมุนของจานหมุนจะทำให้อาหารเกรียมทั่วถึงกัน อุณหภูมิเพื่อเตรียมการย่างเป็นเวลา 3-4 นาที เพื่อให้อาหารเกรียมเร็วขึ้น

ภาชนะสำหรับการย่าง:

อุปกรณ์จะต้องไม่ติดไฟและอาจมีส่วนประกอบของโลหะได้ ห้ามใช้อุปกรณ์ที่เป็นพลาสติก เนื่องจากจะละลายได้

อาหารที่เหมาะสมสำหรับการย่าง:

เนื้อเป็็นชิ้น ไส้กรอก สัตว์ แคมเบอร์เกอร์ เบคอนและซาลาเปาหมูคั่ว เนื้อปลาที่แบนๆ แชนดิวซ์ และขนมปังปิ้งแบบมีที่อบปิ้ง

หมายเหตุสำคัญ:

โปรดทราบว่าการย่างจะต้องอยู่บนตะแกรงสูง นอกจากนี้มีคำแนะนำเป็นอย่างอื่น

ไมโครเวฟ + ย่าง

การอบอาหารแบบนี้เป็นการผสมผสานความร้อนจากขดลวดเข้ากับความเร็วของไมโครเวฟ และจะทำงานเมื่อเปิดประตูและจานหมุนทำงาน การหมุนของจานหมุนจะทำให้อาหารเหลืองเกรียมได้รวดเร็ว คุณสามารถใช้วิธีอบอาหารร่วมกันได้สามแบบสำหรับรุ่นนี้ 600 วัตต์ + ย่าง, 450 วัตต์ + ย่าง และ 300 วัตต์ + ย่าง

อุปกรณ์สำหรับการอบอาหารด้วยไมโครเวฟ + ย่าง

โปรดใช้อุปกรณ์ที่คลื่นไมโครเวฟสามารถผ่านได้ และจะต้องไม่ติดไฟ โปรดอย่าใช้อุปกรณ์หรือภาชนะที่เป็นโลหะกับการทำงานแบบผสม ห้ามใช้อุปกรณ์ที่เป็นพลาสติก เนื่องจากจะละลายได้

อาหารที่เหมาะสมสำหรับการอบด้วยไมโครเวฟ + ย่าง:

อาหารที่เหมาะสมสำหรับการอบแบบผสมนี้ประกอบด้วยอาหารที่สุกแล้วทุกชนิด ซึ่งจะต้องมีการอุ่นและทำให้เหลือง (เช่น พาสต้าอบ) เช่นเดียวกับอาหารที่ต้องใช้เวลาอบไม่นาน เพื่อให้ส่วนบนเหลืองเกรียม นอกจากนี้ การทำงานแบบนี้ยังใช้กับอาหารที่มีลักษณะหนา และควรมีส่วนบนที่เกรียมกรอบ (เช่น ไก่เป็นชิ้น ซึ่งควรกลับด้านเมื่ออบได้ครึ่งของระยะเวลา) โปรดดูรายละเอียดเพิ่มเติมในตารางการย่าง

หมายเหตุสำคัญ:

เมื่อใดก็ตามที่เตาอบทำงานแบบผสม (ไมโครเวฟ + ย่าง) โปรดตรวจสอบว่าขดลวดความร้อนอยู่ใต้ผนังด้านบนในแนวนอน ไม่ใช่ที่ผนังด้านหลังของเตาอบในแนวตั้ง โปรดทราบว่าการย่างจะต้องอยู่บนตะแกรงสูง นอกจากนี้มีคำแนะนำเป็นอย่างอื่น มีฉะนั้น ให้วางบนจานหมุนโดยตรง โปรดดูคำแนะนำในแผงผังต่อไปนี้

คุณจะต้องกลับอาหาร หากต้องการให้เหลืองเกรียมทั้งสองด้าน

คู่มือการย่างสำหรับอาหารแช่แข็ง

ใช้ระดับพลังงานและเวลาในการย่างตามแผงผังต่อไปนี้

อาหารแช่แข็ง	สัดส่วน	ระดับพลังงาน	เวลาของด้านที่หนึ่ง (นาที)	เวลาของด้านที่สอง (นาที)
ขนมปังก้อน (ประมาณก้อนละ 50 กรัม)	2 ชิ้น 4 ชิ้น	ไมโครเวฟ + ย่าง	300 วัตต์ + ย่าง	ย่างเท่านั้น
			1-1½	1-2
			2-2½	1-2
คำแนะนำ				
วางเป็นวงบนตะแกรง ย่างด้านที่สองของก้อนขนมปังให้เหลืองตามต้องการ พักอาหารเป็นเวลา 2-5 นาที				
บาเกตต์ + หน้า (มะเขือเทศ, ซีส, แฮม, เติล)	250-300 กรัม (2 ชิ้น)	450 วัตต์ + ย่าง	8-9	-
			คำแนะนำ	
			วางบาเกตต์แช่แข็งสองชิ้นคู่กันบนตะแกรง หลังจากย่างแล้วให้พักอาหาร 2-3 นาที	
กราแตง (มันฝรั่งและผัก)	400 กรัม	450 วัตต์ + ย่าง	13-14	-
			คำแนะนำ	
			วางกราแตงแช่แข็งในจานแก้วไฟเร็กซ์ขนาดเล็ก วางจานบนตะแกรง พักอาหารเป็นเวลา 2-3 นาที	
พาสต้า (คาเนลโลนี มักกะโรนี ลาซาญูญา)	400 กรัม	ไมโครเวฟ + ย่าง	600 วัตต์ + ย่าง	ย่างเท่านั้น
			14-15	2-3
			คำแนะนำ	
ใส่พาสต้าแช่แข็งในจานแก้วไฟเร็กซ์สี่เหลี่ยมผืนผ้าแบบเรียบ วางจานบนจานหมุน พักอาหารเป็นเวลา 2-3 นาที				

อาหารแช่แข็ง	สัดส่วน	ระดับพลังงาน	เวลาของด้านที่หนึ่ง (นาที)	เวลาของด้านที่สอง (นาที)
นักเก็ตไก่	250 กรัม	450 วัตต์ + ย่าง	5-5½	3-3½
	คำแนะนำ			
	วางนักเก็ตไบบนตะแกรง			
มันฝรั่งทอดสำหรับ เดาอบ	250 กรัม	450 วัตต์ + ย่าง	9-11	4-5
	คำแนะนำ			
	วางมันฝรั่งทอดสำหรับเดาอบบนกระดาษสำหรับอบบนตะแกรง			

คู่มือการย่างสำหรับอาหารสด

อุ่นเดาอบด้วยการย่างเป็นเวลา 4 นาที

ใช้ระดับพลังงานและเวลาในการย่างตามแผนผังต่อไปนี้

อาหารสด	สัดส่วน	ระดับพลังงาน	เวลาของด้านที่หนึ่ง (นาที)	เวลาของด้านที่สอง (นาที)
ขนมปังแผ่น	4 ชิ้น (ชิ้นละ 25 กรัม)	ย่างเท่านั้น	6-8	4-5½
	คำแนะนำ			
	วางแผ่นขนมปังคู่กันบนตะแกรง			
ก้อนขนมปัง (อบแล้ว)	2-4 ชิ้น	ย่างเท่านั้น	2-3	2-3
	คำแนะนำ			
	วางขนมปังก้อนก่อนโดยเอาด้านล่างขึ้นบนเป็นวงกลมบนจานหมุน			

อาหารสด	สัดส่วน	ระดับพลังงาน	เวลาของด้านที่หนึ่ง (นาที)	เวลาของด้านที่สอง (นาที)
มะเขือเทศย่าง	200 กรัม (2 ชิ้น)	ไมโครเวฟ + ย่าง	300 วัตต์ + ย่าง	ย่างเท่านั้น
	400 กรัม (4 ชิ้น)		4½-5½	2-3
	คำแนะนำ			
โทสต์อวาว (สัปรด แอม แผ่นซีล)	2 ชิ้น (300 กรัม)	450 วัตต์ + ย่าง	3½-4	-
	คำแนะนำ			
	ปิ้งขนมปังก่อน วางขนมปังปิ้งพร้อมท็อปปิงบนตะแกรง วางขนมปัง 2 แผ่นตรงข้ามกันบน ตะแกรง พักอาหารเป็นเวลา 2-3 นาที			
มันฝรั่งอบ	250 กรัม 500 กรัม	600 วัตต์ + ย่าง	4½-5½ 8-9	-
	คำแนะนำ			
	หั่นแบ่งมันฝรั่งเป็นครึ่งหัว วางเป็นวงบนตะแกรง โดยให้ด้านที่thinอยู่ทางที่จะย่าง			
ไก่เป็นชิ้น	450-500 กรัม (2 ชิ้น)	300 วัตต์ + ย่าง	10-12	12-13
	คำแนะนำ			
	ใช้แปรงทาน้ำมันและเครื่องเทศให้ทั่วชิ้นไก่ วางเป็นวงโดยให้กระดูกอยู่ตรงกลาง วางชิ้นไก่โดยไม่ต้องให้อยู่กึ่งกลางตะแกรง พักอาหารเป็นเวลา 2-3 นาที			

อาหารสด	สัดส่วน	ระดับพลังงาน	เวลาของด้านที่หนึ่ง (นาที)	เวลาของด้านที่สอง (นาที)
แลมบ์ซอป/สเต็คเนื้อ (สุกปานกลาง)	400 กรัม (4 ชิ้น)	ย่างเท่านั้น	12-15	9-12
	คำแนะนำ			
	ใช้แปรงทาน้ำมันและเครื่องเทศบนเนื้อแกะ วางเป็นวงบนตะแกรง หลังจากย่างแล้วให้พักอาหาร 2-3 นาที			
สเต็คหมู	250 กรัม (2 ชิ้น)	ไมโครเวฟ + ย่าง	300 วัตต์ + ย่าง 7-8	ย่างเท่านั้น 6-7
	คำแนะนำ			
	ใช้แปรงทาน้ำมันและเครื่องเทศบนสเต็คหมู วางเป็นวงบนตะแกรง หลังจากย่างแล้วให้พักอาหาร 2-3 นาที			
แอปเปิ้ลอบ	แอปเปิ้ล 1 ผล (ประมาณ 200 กรัม)	300 วัตต์ + ย่าง	4-4½	-
	แอปเปิ้ล 2 ผล (ประมาณ 400 กรัม)		6-7	
	คำแนะนำ			
	คว้านไส้แอปเปิ้ลและยัดด้วยลูกเกดและแยม ใส่อัลมอนต์ฝานบางๆ ไว้ด้านบน วางแอปเปิ้ลบนจานแก้วไฟเร็กซ์แบบเรียบ วางจานบนจานหมุน			
ไก่อบ	1200 กรัม	600 วัตต์ + ย่าง	15-18	15-18
	คำแนะนำ			
	ใช้แปรงทาน้ำมันและเครื่องเทศให้ทั่วตัวไก่ วางด้านนอกของไก่คว่ำลงก่อน จากนั้นค่อยหงายอกขึ้นบนจานไฟเร็กซ์ พักอาหารเป็นเวลา 5 นาทีหลังจากย่าง			

เคล็ดลับพิเศษ

การละลายเนย

ใส่เนย 50 กรัมในจานแก้วก้นลึกขนาดเล็ก ครอบด้วยฝาพลาสติก
อุ่นเป็นเวลา 30-40 วินาที โดยใช้กำลังไฟ 800 วัตต์ จนเนยละลาย

การละลายชีสค็อกเกต

ใส่ชีสค็อกเกต 100 กรัมในจานแก้วก้นลึก
ให้ความร้อนเป็นเวลา 3-5 นาที โดยใช้พลังงาน 450 วัตต์ จนชีสค็อกเกตละลาย
คนหนึ่งหรือสองครั้งระหว่างการละลาย ใช้ถุงมือกันความร้อนเมื่อนำออกจากเตา

การละลายผลึกน้ำผึ้ง

ใส่เกล็ดน้ำผึ้ง 20 กรัมในจานแก้วก้นลึก
ให้ความร้อนเป็นเวลา 20-30 วินาที ใช้พลังงาน 300 วัตต์ จนน้ำผึ้งละลาย

การละลายเจลาติน

วางแผ่นเจลาตินแห้ง (10 กรัม) ไว้ในน้ำเย็นเป็นเวลา 5 นาที
นำน้ำออก และใส่เจลาตินในถ้วยแก้วไฟเร็กซ์ขนาดเล็ก
ให้ความร้อน 1 นาทีโดยใช้พลังงาน 300 วัตต์
คนหลังการละลาย

การอบหน้าเค้กไอซ์ซิ่ง (สำหรับเค้กและขนม)

ผสมหน้า (ประมาณ 14 กรัม) กับน้ำตาล 40 กรัมและน้ำเย็น 250 มล.
อบโดยไม่ต้องปิดฝา ในถ้วยแก้วไฟเร็กซ์ เป็นเวลา 3½ ถึง 4½ โดยใช้พลังงาน 800 วัตต์ จนกระทั่งหน้าเค้กไอซ์ซิ่งใส
คนสองครั้งระหว่างการอบ

การทำแยม

ใส่ผลไม้ 600 กรัม (เช่น เบอร์รี่ชนิดต่างๆ) ในซามแก้ว ไฟเร็กซ์ที่มีขนาดเหมาะสมและมีฝาปิด เติมน้ำตาล 300 กรัม
และคนให้ทั่ว
อบโดยปิดฝาเป็นเวลา 10-12 นาที โดยใช้กำลังไฟ 800 วัตต์
คนบ่อยๆ ระหว่างการอบ เกล็ดในถาดแก้วใสแยม ที่มีฝาปิดเกลียว พักโดยปิดฝาไว้ 5 นาที

การทอดดีง

ผสมผงฟูดีงกับน้ำตาลและนม (500 มล.) ตามคำแนะนำของผู้ผลิต จากนั้นคนให้เข้ากัน ใช้อ่างแก้วไฟเร็กซ์ที่มีฝาปิด
อบโดยปิดฝาเป็นเวลา 6½ ถึง 7½ นาที โดยใช้พลังงาน 800 วัตต์
คนบ่อยๆ ระหว่างการอบ

การอบเมล็ดอัลมอนต์แผ่น

นำเมล็ดอัลมอนต์ฝานแผ่นเป็นแผ่น 30 กรัมมาใส่ในจานกระเบื้องให้เสมอกัน
คนหลายๆ ครั้งระหว่างที่เริ่มเหลืองเป็นเวลา 3½ ถึง 4½ โดยใช้ความร้อน 600 วัตต์
พักในเตาเป็นเวลาประมาณ 2-3 นาที ใช้ถุงมือกันความร้อนเมื่อนำออกจากเตา

การแก้ไขปัญหา

ถ้าคุณประสบปัญหาอย่างใดอย่างหนึ่งที่ปรากฏด้านล่าง โปรดลองใช้วิธีแก้ไขปัญหาก็ให้มา

ซึ่งเป็นอาการปกติ

- เกิดไอน้ำเกาะตัวในเตาอบ
- มีอากาศหมุนเวียนใกล้ประตูและด้านนอกของเตาอบ
- มีการสะท้อนแสงรอบ ๆ ประตูและกรอบด้านนอก
- มีไอน้ำออกมาจากข้างประตูหรือช่องระบายอากาศ

เตาอบไม่เริ่มทำงานเมื่อหมุนปุ่ม ตั้งเวลาให้ห้หนัก (ละลายน้ำแข็ง)

- ประตูปิดเรียบร้อยแล้วหรือไม่

อาหารไม่สุกเลย

- คุณกำหนดเวลาไว้ถูกต้องหรือไม่
- ประตูปิดเรียบร้อยแล้วหรือไม่
- คุณใช้วงจรไฟฟ้าเกินกำลัง และทำให้ฟิวส์ขาดหรือทำให้เบรกเกอร์ตัดไฟหรือไม่

อาหารสุกเกินไปหรือไม่สุกพอ

- คุณใช้ระยะเวลาในการอบอาหารเหมาะสมกับชนิดของอาหารหรือไม่
- ระดับพลังงานที่เลือกถูกต้องหรือไม่

หลอดไฟไม่สว่าง

- ห้ามเปลี่ยนหลอดไฟด้วยตนเอง เพื่อความปลอดภัย โปรดติดต่อศูนย์บริการลูกค้าที่ได้รับอนุญาตของ Samsung ที่อยู่ใกล้ เพื่อนัดหมายให้ช่างที่มีคุณสมบัติเป็นผู้เปลี่ยนหลอดไฟให้

เตาอบทำให้เกิดสัญญาณรบกวนทางวิทยุหรือโทรทัศน์

- คุณอาจพบสัญญาณรบกวนทางวิทยุหรือวิทยุขนาดเล็กน้อย เมื่อเตาอบทำงาน ซึ่งเป็นอาการปกติ นี่เป็นอาการปกติ ในการแก้ไขปัญหานี้ โปรดติดตั้งเตาไมโครเวฟให้ห่างจากเครื่องรับโทรทัศน์ วิทยุ และเสาอากาศ

มีประกายไฟหรือเสียงแตกเกิดขึ้นภายในเตาอบ (เกิดประกายไฟ)

- คุณใช้จานที่มีขอบโลหะหรือไม่
- คุณลืมส้อมหรือเครื่องใช้ในครัวที่เป็นโลหะไว้ในเตาอบหรือไม่
- แผ่นฟอยล์อะลูมิเนียมใกล้กับผนังด้านในของเตาอบหรือไม่

มีควันและกลิ่นเหม็นเมื่อเริ่มต้มน้ำ

- เป็นอาการที่เกิดขึ้นชั่วคราวเนื่องจากชิ้นส่วนใหม่ได้รับความร้อน ควันและกลิ่นเหม็นจะหายไปหลังจากใช้งานประมาณ 10 นาที
- ถ้าต้องการให้ควันและกลิ่นหายไปเร็วยิ่งขึ้น โปรดใช้จานไมโครเวฟโดยใส่หมวกหรือน้ำมันในเตาอบ

ถ้าคำแนะนำข้างต้นไม่สามารถแก้ไขปัญหาได้ โปรดติดต่อศูนย์บริการลูกค้า SAMSUNG ใกล้บ้านคุณ โปรดเตรียมข้อมูลต่อไปนี้ให้พร้อม

- หมายเลขรุ่นและหมายเลขผลิตภัณฑ์ ซึ่งมักจะพิมพ์ไว้ที่ด้านหลังของเตาอบ
- รายละเอียดของการรับประกัน
- คำอธิบายปัญหาอย่างชัดเจน

จากนั้นติดต่อผู้แทนจำหน่าย หรือฝ่ายบริการหลังการขายของ SAMSUNG

ข้อมูลจำเพาะด้านเทคนิค

SAMSUNG มุ่งมั่นที่จะพัฒนาผลิตภัณฑ์อยู่เสมอ ดังนั้นรายละเอียดของเครื่องและคำแนะนำสำหรับผู้ใช้นี้จึงอาจมีการเปลี่ยนแปลง โดยไม่ได้แจ้งให้ทราบ

รุ่น	MG23F301E**, MG23F302E**
การจ่ายไฟ	220 V ~ 50 Hz
การใช้พลังงาน	
ไมโครเวฟ	1200 วัตต์
ย่าง	1050 วัตต์
โหมดผสม	2250 วัตต์
กำลังไฟฟ้า	100 วัตต์ / 800 วัตต์ (IEC-T05)
ความถี่ของคลื่นขณะทำงาน	2450 เมกะเฮิร์ตซ์
แมกนีตรอน	OM75P(31)
วิธีระบายความร้อน	มอเตอร์พัดลมระบายความร้อน
ขนาด (กว้าง x สูง x ลึก)	
ด้านนอก	489 x 275 x 392 มม.
ช่องของเตาอบ	330 x 211 x 324 มม.
ปริมาตร	23 ลิตร
น้ำหนักสุทธิ	13 กก. โดยประมาณ



ถ้าคุณมีคำถามหรือข้อคิดเห็น

ประเทศ	โทรศัพท์	หรือเยี่ยมชมเว็บไซต์ของเราที่
AUSTRALIA	1300 362 603	www.samsung.com/au
NEW ZEALAND	0800 SAMSUNG (0800 726 786)	www.samsung.com/nz
CHINA	400-810-5858	www.samsung.com
HONG KONG	(852) 3698 4698	www.samsung.com/hk (Chinese) www.samsung.com/hk_en (English)
INDIA	1800 3000 8282 1800 266 8282	www.samsung.com/in
INDONESIA	0800-112-8888 (Toll Free) 021-5699-7777	www.samsung.com/id
JAPAN	0120-327-527	www.samsung.com
MALAYSIA	1800-88-9999	www.samsung.com/my
PHILIPPINES	1-800-10-7267864 [PLDT] 1-800-8-7267864 [Globe landline and Mobile] 02-4222111 [Other landline]	www.samsung.com/ph
SINGAPORE	1800-SAMSUNG(726-7864)	www.samsung.com/sg
THAILAND	0-2689-3232 1800-29-3232	www.samsung.com/th
TAIWAN	0800-329-999	www.samsung.com/tw
VIETNAM	1 800 588 889	www.samsung.com

DE68-03911L



Microwave Oven

Owner's Instructions & Cooking Guide

Please be advised that the Samsung warranty does NOT cover service calls to explain product operation, correct improper installation, or perform normal cleaning or maintenance.

Planet First 100 %
Recycled Paper

This manual is made with 100 % recycled paper.

MG23F301E**

MG23F302E**

imagine the possibilities

Thank you for purchasing this Samsung product.
To receive more complete service, please register
your product at

www.samsung.com/register

SAMSUNG





contents

Quick look-up guide	11
Oven features.....	12
Oven.....	12
Control panel	12
Accessories	13
Oven use.....	14
How a microwave oven works	14
Checking that your oven is operating correctly	14
Setting the time	15
Cooking/Reheating	15
Power levels	16
Adjusting the cooking time.....	16
Stopping the cooking.....	16
Defrost (Time) food	16
Using the defrost (weight) feature.....	17
Using the power steam cooking guide (Only MG23F301EF*, MG23F301EJ*, MG23F302EF*, MG23F302EJ* models)...	17
Using the crusty plate (Only MG23F301EC*, MG23F301EJ*, MG23F302EC*, MG23F302EJ* models) ..	19
Choosing the accessories.....	20
Grilling	20
Combining microwaves and the grill.....	21
Cookware guide	22
Cooking guide.....	23
Troubleshooting.....	31
Technical specifications	31

safety information

USING THIS INSTRUCTION BOOKLET

You have just purchased a SAMSUNG microwave oven. Your Owner's Instructions contain valuable information on cooking with your microwave oven:

- Safety precautions
- Suitable accessories and cookware
- Useful cooking tips
- Cooking tips

LEGEND FOR SYMBOLS AND ICONS



WARNING

Hazards or unsafe practices that may result in **severe personal injury or death**.



CAUTION

Hazards or unsafe practices that may result in **minor personal injury or property damage**.



Warning; Fire hazard



Warning; Hot surface



Warning; Electricity



Warning; Explosive material



Do NOT attempt.



Do NOT touch.



Do NOT disassemble.



Follow directions explicitly.



Unplug the power plug from the wall socket.



Make sure the machine is grounded to prevent electric shock.



Call the service center for help.



Note



Important







IMPORTANT SAFETY INSTRUCTIONS


READ CAREFULLY AND KEEP FOR FUTURE REFERENCE.


Make sure that these safety precautions are obeyed at all times.


Before using the oven, confirm that the following instructions are followed.


WARNING (Microwave function only)

-  **WARNING:** If the door or door seals are damaged, the oven must not be operated until it has been repaired by a competent person.
-  **WARNING:** It is hazardous for anyone other than a competent person to carry out any service or repair operation that involves the removal of a cover which gives protection against exposure to microwave energy.
-  **WARNING:** Liquids and other foods must not be heated in sealed containers since they are liable to explode.
-  This appliance is intended to be used in household only.

 **WARNING:** Only allow children to use the oven without supervision when adequate instructions have been given so that the child is able to use the oven in a safe way and understands the hazards of improper use.

 **WARNING:** This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are aged from 8 years and above and supervised.

 Only use utensils that are suitable for use in microwave ovens.

 When heating food in plastic or paper containers, keep an eye on the oven due to the possibility of ignitions.



★ The microwave oven is intended for heating food and beverages. Drying of food or clothing and heating of warming pads, slippers, sponges, damp cloth and similar may lead to risk of injury, ignition or fire.

☞ If smoke is emitted, switch off or unplug the appliance and keep the door closed in order to stifle any flames.

★ **WARNING:** Microwave heating of beverages can result in delayed eruptive boiling, therefore care must be taken when handling the container.

★ **WARNING:** The contents of feeding bottles and baby food jars shall be stirred or shaken and the temperature checked before consumption, in order to avoid burns.

☞ Eggs in their shell and whole hard-boiled eggs should not be heated in microwave ovens since they may explode, even after microwave heating has ended.

★ The oven should be cleaned regularly and any food deposits removed.

☞ Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation.

☞ The appliance is not intended for installing in road vehicles, caravans and similar vehicles etc.

★ This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

★ Children should be supervised to ensure that they do not play with the appliance.

☞ If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

☞ **WARNING:** Liquids or other foods must not be heated in sealed containers since they are liable to explode;



- ☐ The appliance should not be cleaned with a water jet.
- ☒ This oven should be positioned proper direction and height permitting easy access to cavity and control area.
- ☒ Before using the your oven first time, oven should be operated with the water during 10 minute and then used.
- ☒ If the oven generates a strange noise, a burning smell, or smoke is emitted, unplug the power plug immediately and contact your nearest service center.
- ☒ The microwave oven has to be positioned so that plug is accessible.
- ☐ The microwave oven is intended to be used on the counter or counter top use only, the microwave oven shall not be placed in a cabinet.

⚠ WARNING
(Oven function only) - Optional

- ☒ **WARNING:** When the appliance is operated in the combination mode, children should only use the oven under adult supervision due to the temperatures generated.

- ☒ During use the appliance becomes hot. Care should be taken to avoid touching heating elements inside the oven.
- ☐ **WARNING:** Accessible parts may become hot during use. Young children should be kept away.
- ☐ A steam cleaner is not to be used.
- ☐ **WARNING:** Ensure that the appliance is switched off before replacing the lamp to avoid the possibility of electric shock.
- ☒ **WARNING:** The appliance and its accessible parts become hot during use. Care should be taken to avoid touching heating elements. Children less than 8 years of age shall be kept away unless continuously supervised.
- ☐ The temperature of accessible surfaces may be high when the appliance is operating.
- ☐ The door or the outer surface may get hot when the appliance is operating.
- ☐ Keep the appliance and its cord out of reach of children less than 8 years.



- ★ This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.


- ❑ Do not use harsh abrasive cleaners or sharp metal scrapers to clean the oven door glass since they can scratch the surface, which may result in shattering of the glass.

- ❑ Appliances are not intended to be operated by means of an external timer or separate remote-control system.

INSTALLING YOUR MICROWAVE OVEN

Place the oven on a flat level surface 85 cm above the floor. The surface should be strong enough to safely bear the weight of the oven.

1. When you install your oven, make sure there is adequate ventilation for your oven by leaving at least 10 cm (4 inches) of space behind and, on the sides of the oven and 20 cm (8 inches) of space above.

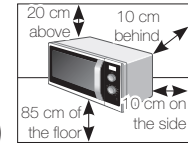

2. Remove all packing materials inside the oven.
 3. Install the roller ring and turntable. Check that the turntable rotates freely. (Turntable type model only)
 4. This microwave oven has to be positioned so that plug is accessible.
- ❑ If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard. For your personal safety, plug the cable into a proper AC earthed socket.
 - ❑ Do not install the microwave oven in hot or damp surroundings like next to a traditional



oven or radiator. The power supply specifications of the oven must be respected and any extension cable used must be of the same standard as the power cable supplied with the oven. Wipe the interior and the door seal with a damp cloth before using your microwave oven for the first time.

CLEANING YOUR MICROWAVE OVEN

The following parts of your microwave oven should be cleaned regularly to prevent grease and food particles from building up:

- Inside and outside surfaces
- Door and door seals
- Turntable and Roller rings (Turntable type model only)

- ☐ **ALWAYS** ensure that the door seals are clean and the door closes properly.
- ☐ Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation.

1. Clean the outside surfaces with a soft cloth and warm, soapy water. Rinse and dry.

2. Remove any splashes or stains on the inside surfaces of oven with a soapy cloth. Rinse and dry.

3. To loosen hardened food particles and remove smells, place a cup of diluted lemon juice in the oven and heat for ten minutes at maximum power.

4. Wash the dishwasher-safe plate whenever necessary.

 
☐ **DO NOT** spill water in the vents. **NEVER** use any abrasive products or chemical solvents. Take particular care when cleaning the door seals to ensure that no particles:

- Accumulate
- Prevent the door from closing correctly

☐ **Clean** the microwave oven cavity right after each use with a mild detergent solution, but let the microwave oven cool down before cleaning in order to avoid injury.



When cleaning the upper part inside the cavity, it will be convenient to turn heater downward by 45 ° and clean it. (Swing heater model only)



STORING AND REPAIRING YOUR MICROWAVE OVEN

A few simple precautions should be taken when storing or having your microwave oven serviced.

The oven must not be used if the door or door seals are damaged:

- Broken hinge
- Deteriorated seals
- Distorted or bent oven casing

Only a qualified microwave service technician should perform repair

☐ **NEVER** remove the outer casing from the oven. If the oven is faulty and needs servicing or you are in doubt about its condition:

- Unplug it from the wall socket
- Contact the nearest after-sales service centre

- ☐ If you wish to store your oven away temporarily, choose a dry, dustfree place.
Reason : Dust and damp may adversely affect the working parts in the oven.
- ☐ This microwave oven is not intended for commercial use.
- ☐ The Light bulb should not be replaced in person for safety reasons.
Please contact nearest authorised Samsung customer care, to arrange for a qualified engineer to replace the bulb.

⚠ WARNING

☒ Only qualified staff should be allowed to modify or repair the appliance.	✓	✓	✓	✓
☐ Do not heat liquids and other food in sealed containers for microwave function.	✓	✓	✓	✓
☐ For your safety, do not use high-pressure water cleaners or steam jet cleaners.	✓	✓	✓	✓
☐ Do not install this appliance; near heater, inflammable material; in a humid, oily or dusty location, in a location exposed to direct sunlight and water or where gas may leak; on un level ground.	✓	✓	✓	✓
This appliance must be properly grounded in accordance with local and national codes.	✓	✓	✓	✓
★ Remove all foreign substances such as dust or water from the power plug terminals and contact points using a dry cloth on a regular basis.	✓	✓	✓	✓



<input type="checkbox"/>	Do not pull or excessively bend or place heavy object on the power cord.	✓	✓	✓	✓
<input checked="" type="checkbox"/>	In the event of a gas leak (such as propane gas, LP gas, etc.), ventilate immediately without touching the power plug.	✓	✓	✓	✓
<input checked="" type="checkbox"/>	Do not touch the power plug with wet hands.	✓	✓	✓	✓
<input type="checkbox"/>	Do not turn the appliance off by unplugging the power plug while an operation is in progress.	✓	✓	✓	✓
<input checked="" type="checkbox"/>	Do not insert fingers or foreign substances, If any foreign substance such as water has entered the appliance, unplug the power plug and contact your nearest service centre.	✓	✓	✓	✓
<input type="checkbox"/>	Do not apply excessive pressure or impact to the appliance.	✓	✓	✓	✓
<input type="checkbox"/>	Do not place the oven over a fragile object such as a sink or glass object.	✓	✓		
<input type="checkbox"/>	Do not use benzene, thinner, alcohol, steam cleaner or high pressure cleaner to clean the appliance.	✓	✓	✓	✓
<input type="checkbox"/>	Ensure that the power voltage, frequency and current are the same as those of the product specifications.	✓	✓		✓
<input type="checkbox"/>	Plug the power plug into the wall socket firmly. Do not use a multiple plug adapter, an extension cord or an electric transformer.	✓	✓	✓	
<input type="checkbox"/>	Do not hook the power cord on a metal object, insert the power cord between the objects or behind the oven.	✓	✓	✓	
<input type="checkbox"/>	Do not use a damaged power plug, damaged power cord or loose wall socket. When the power plug or power cord is damaged, contact your nearest service centre.	✓	✓	✓	✓

<input type="checkbox"/>	Do not pour or directly spray water onto the oven.	✓	✓		
<input type="checkbox"/>	Do not place objects on the oven, inside or on the door of the oven.	✓	✓	✓	
<input type="checkbox"/>	Do not spray volatile material such as insecticide onto the surface of the oven.	✓	✓		
<input type="checkbox"/>	Do not store flammable materials in the oven. Take special care when heating dishes or drinks that contain alcohol as alcohol vapours may contact a hot part of the oven.	✓		✓	✓
<input checked="" type="checkbox"/>	Keep children away from the door when opening or closing it as they may bump themselves on the door or catch their fingers in the door.	✓	✓	✓	✓
<input checked="" type="checkbox"/>	WARNING: Microwave heating of beverages can result in delayed eruptive boiling, therefore care must be taken when handling the container; To prevent this situation ALWAYS allow a standing time of at least 20 seconds after the oven has been switched off so that the temperature can equalize. Stir during heating, if necessary, and ALWAYS stir after heating. In the event of scalding, follow these FIRST AID instructions: <ul style="list-style-type: none"> Immerse the scalded area in cold water for at least 10 minutes. Cover with a clean, dry dressing. Do not apply any creams, oils or lotions. 	✓	✓	✓	✓



CAUTION					
Only use utensils that are suitable for use in microwave ovens; DO NOT use any metallic containers, Dinnerware with gold or silver trimmings, Skewers, forks, etc. Remove wire twist ties from paper or plastic bags. Reason: Electric arcing or sparking may occur and may damage the oven.	✓		✓	✓	
Do not use your microwave oven to dry papers or clothes.	✓		✓	✓	
Use shorter times for smaller amounts of food to prevent overheating and burning food.	✓		✓	✓	
Do not immerse the power cable or power plug in water and keep the power cable away from heat.	✓	✓			
Eggs in their shell and whole hard-boiled eggs should not be heated in microwave ovens since they may explode, even after microwave heating has ended; Also do not heat airtight or vacuum-sealed bottles, jars, containers, nuts in shells, tomatoes etc.			✓	✓	
Do not cover the ventilation slots with cloth or paper. They may catch fire as hot air escapes from the oven. The oven may also overheat and switch itself off automatically, and will remain off until it cools sufficiently.	✓		✓		
Always use oven mitts when removing a dish from the oven to avoid unintentional burns.			✓		
Stir liquids halfway during heating or after heating ends and allow the liquid stand at least 20 seconds after heating to prevent eruptive boiling.			✓		
Stand at arms length from the oven when opening the door to avoid getting scalded by escaping hot air or steam.			✓		

Do not operate the microwave oven when it is empty. The microwave oven will automatically shut down for 30 minutes for safety purposes. We recommend placing a glass of water inside the oven at all times to absorb microwave energy in case the microwave oven is started accidentally.	✓		✓
Install the oven in compliance with the clearances stated in this manual. (See installing your microwave oven.)	✓		✓
Take care when connecting other electrical appliances to sockets near the oven.	✓	✓	✓

PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY.(MICROWAVE FUNCTION ONLY)

Failure to observe the following safety precautions may result in harmful exposure to microwave energy.

- Under no circumstances should any attempt be made to operate the oven with the door open or to tamper with the safety interlocks (door latches) or to insert anything into the safety interlock holes.
- Do NOT place any object between the oven door and front face or allow food or cleaner residues to accumulate on sealing surfaces. Ensure that the door and door sealing surfaces are kept clean by wiping after use first with a damp cloth and then with a soft dry cloth.
- Do NOT operate the oven if it is damaged until it has been repaired by a qualified microwave service technician trained by the manufacturer. It is particularly important that the oven door closes properly and that there is no damage to the:
 - door (bent)
 - door hinges (broken or loose)
 - door seals and sealing surfaces
- The oven should not be adjusted or repaired by anyone other than a properly qualified microwave service technician trained by the manufacturer.



 
Samsung will charge a repair fee for replacing an accessory or repairing a cosmetic defect if the damage to the unit and/or damage to or loss of the accessory was caused by the customer. Items this stipulation covers include:

- (a) A Dented, Scratched, or Broken Door, Handle, Out-Panel, or Control Panel.
 - (b) A Broken or missing Tray, Guide Roller, Coupler, or Wire Rack.
- Use this appliance only for its intended purpose as described in this instruction manual. Warnings and Important Safety Instructions in this manual do not cover all possible conditions and situations that may occur. It is your responsibility to use common sense, caution, and care when installing, maintaining, and operating your appliance.
 - Because these following operating instructions cover various models, the characteristics of your microwave oven may differ slightly from those described in this manual and not all warning signs may be applicable. If you have any questions or concerns, contact your nearest service centre or find help and information online at www.samsung.com.
 - This microwave oven is supposed for heating food. It is intended for domestic home-use only. Do not heat any type of textiles or cushions filled with grains, which could cause burns and fire. The manufacturer cannot be held liable for damage caused by improper or incorrect use of the appliance.
 - Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possible result in a hazardous situation.

quick look-up guide


If you want to cook some food.

1. Place the food in the oven.
Select the power level by rotating the **COOKING POWER CONTROL** knob.




2. Select the cooking time by rotating the **TIME/WEIGHT** (g/g) dial.

 Result: Cooking starts after about two seconds.




If you want to Defrost (Weight) some food.

 1. Turn the **COOKING POWER CONTROL** knob to the **Defrost (Weight)** symbol.




2. Turn the **TIME/WEIGHT** (g/g) dial to select the appropriate weight.

 Result: Cooking starts after about two seconds.




If you want to adjust the cooking time.

 Leave the food in the oven.
Turn the **TIME/WEIGHT** (g/g) dial to the desired time.




If you want to grill some food.

 1. Turn the **COOKING POWER CONTROL** knob to the **Grill** symbol.



2. Turn the **TIME/WEIGHT** (g/g) dial to select the appropriate time.

 
Result: Cooking starts after about two seconds.






oven features

OVEN

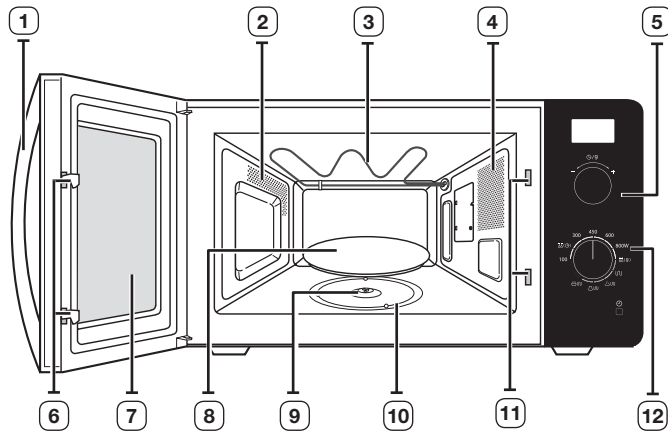

- | | |
|-----------------------|---|
| 1. DOOR HANDLE | 7. DOOR |
| 2. VENTILATION HOLES | 8. TURNTABLE |
| 3. GRILL | 9. COUPLER |
| 4. LIGHT | 10. ROLLER RING |
| 5. TIME / WEIGHT DIAL | 11. SAFETY INTERLOCK HOLES |
| 6. DOOR LATCHES | 12. VARIABLE COOKING POWER CONTROL KNOB |

CONTROL PANEL

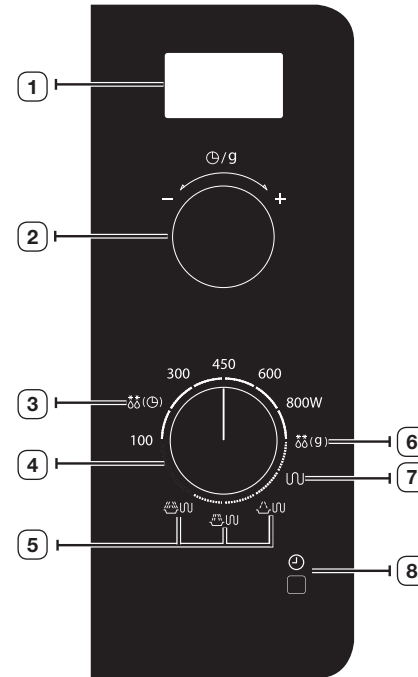

- | | |
|--|------------------------------|
| 1. DISPLAY | 5. COMBI (Microwave + Grill) |
| 2. TIME / WEIGHT DIAL | 6. DEFROST (WEIGHT) |
| 3. DEFROST (TIME) | 7. GRILL |
| 4. VARIABLE COOKING POWER CONTROL KNOB | 8. CLOCK SETTING BUTTON |



 


ACCESSORIES

Depending on the model that you have purchased, you are supplied with several accessories that can be used in a variety of ways.


- 1. Roller ring**, to be placed in the centre of the oven.

Purpose : The roller ring supports the turntable.




- 2. Turntable**, to be placed on the roller ring with the centre fitting to the coupler.

 Purpose : The turntable serves as the main cooking surface; it can be easily removed for cleaning.



- 3. Grill rack**, to be placed on the turntable.

 
Purpose : The metal rack can be used in grill and combination cooking.




- 4. Crusty plate**, see page 19~20.

(Only MG23F301EC*, MG23F301EJ*, MG23F302EC*, MG23F302EJ* models)

 Purpose: The crusty plate is used to brown food better in the microwave or grill combination cooking modes. It helps keep pastry and pizza dough crisp.





-  **DO NOT** operate the microwave oven without the roller ring and turntable.


- 5. Steam cooker**, see page 17 to 18.


(Only MG23F301EF*, MG23F301EJ*, MG23F302EF*, MG23F302EJ* models)

 Purpose : The plastic steam cooker when using power steam function.



-  **DO NOT** operate the microwave oven without the roller ring and turntable.

-  **DO NOT** operate the **Grill** (ㄱ) and **Combi** (ㄷ) mode with Steam cooker.

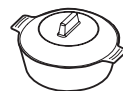Operation Mode	MW (ㄱ)	GRILL (ㄴ)	COMBI (ㄷ)
 (Steam cooker)	O	X	X



oven use

HOW A MICROWAVE OVEN WORKS


Microwaves are high-frequency electromagnetic waves; the energy released enables food to be cooked or reheated without the foods form or colour changing.


You can use your microwave oven to:

- Defrost (manual & auto)
- Cook
- Reheat

Cooking Principle

1. The microwaves generated by the magnetron are distributed uniformly as the food rotates on the turntable. The food is thus cooked evenly.
2. The microwaves are absorbed by the food up to a depth of about 1 inch (2.5 cm). Cooking then continues as the heat is dissipated within the food.
3. Cooking times vary according to the recipient used and the properties of the food:
 - Quantity and density
 - Water content
 - Initial temperature (refrigerated or not)

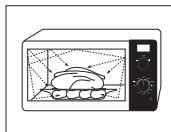

 As the centre of the food is cooked by heat dissipation, cooking continues even when you have taken the food out of the oven. Standing times specified in recipes and in this booklet must therefore be respected to ensure:

 
- Even cooking of the food right to the centre
- The same temperature throughout the food

CHECKING THAT YOUR OVEN IS OPERATING CORRECTLY


The following simple procedure enables you to check that your oven is working correctly at all times.

Open the oven door by pulling the handle on the right side of the door. Place a glass of water on the turntable. Then, close the door.

1. Set the power level to maximum by turning **COOKING POWER CONTROL** knob.



 
2. Set the time 4 to 5 minutes by turning the **TIME/WEIGHT** (9/9) dial.



Result:

The oven light comes on and the turntable starts rotating.

- 1) Cooking starts and when it has finished the oven beeps 4 times.
- 2) The end reminder signal will beep 3 times (once every minute).
- 3) The current time is displayed again.


-  The oven must be plugged into an appropriate wall socket. The turntable must be in position in the oven. If a power level other than the maximum is used, the water takes longer to boil.



SETTING THE TIME

Your microwave oven has an inbuilt clock. When power is supplied, “:0”, “88:88” or “12:00” is automatically displayed on the display. Please set the current time. The time can be displayed in either the 24-hour or 12-hour notation. You must set the clock:

- When you first install your microwave oven
- After a power failure

 Do not forget to reset the clock when you switch to and from summer or winter time.

Auto energy saving function

If you do not select any function when appliance is in the middle of setting or operating with temporary stop condition, function is canceled and clock will be displayed after 25 minutes.

 
Oven Lamp will be turned off after 5 minutes with door open condition.

1. To display the time in the...


24-hour notation.

12-hour notation.


Press the (⌚) button once or twice.



 
2. Turn the **TIME/WEIGHT** (⌚/g) dial to set hour.



 
3. Press the (⌚) button.



 4. Turn the **TIME/WEIGHT** (⌚/g) dial to set minute.



 5. Press the (⌚) button.



COOKING/REHEATING

The following procedure explains how to cook or reheat food.

 
Always check your cooking settings before leaving the oven unattended.

First, place the food in the centre of the turntable. Then, close the door.

1. Set the power level to maximum by turning

COOKING POWER CONTROL knob.

(MAXIMUM POWER : 800 W)




2. Set the time by turning **TIME/WEIGHT** (⌚/g) dial.

Result:

The oven light comes on and the turntable starts rotating.

 - 1) Cooking starts and when it has finished the oven beeps 4 times.
- 2) The end reminder signal will beep 3 times (once every minute).
- 3) The current time is displayed again.



 **Never** switch the microwave oven on when it is empty.


 You can change the power level during cooking by turning the **COOKING POWER CONTROL** knob.




POWER LEVELS

You can choose any of the power levels listed below.

Power Level	Output	
	MWO	GRILL
HIGH	800 W	-
MEDIUM HIGH	600 W	-
MEDIUM	450 W	-
MEDIUM LOW	300 W	-
DEFROST (TIME)	180 W	-
DEFROST (WEIGHT)	180 W	-
LOW / KEEP WARM	100 W	-
GRILL	-	1050 W
MWO LOW + GRILL	300 W	1050 W
MWO MID + GRILL	450 W	1050 W
MWO HIGH + GRILL	600 W	1050 W

 
 If you select higher power level, the cooking time must be decreased.

 If you select lower power level, the cooking time must be increased.

ADJUSTING THE COOKING TIME

Adjust the remaining cooking time by rotating the **TIME/WEIGHT** (⌚/g) dial.

During the cooking to increase or decrease the cooking time of you food, turn the dial right or left.




STOPPING THE COOKING


You can stop cooking at any time to check the food.

1. To stop temporarily;
Open the door.

 Result: Cooking stops. To resume cooking, close the door.



 
2. To stop completely;
Turn the **TIME/WEIGHT** (⌚/g) dial to the left.
“Current time” will be displayed.



DEFROST (TIME) FOOD

The Defrost (Time) feature enables you to defrost meat, poultry, fish. First, place the frozen food in the centre of the turntable and close the door.

 
1. Turn the **COOKING POWER CONTROL** knob to the **Defrost (Time)** symbol.





2. Turn the **TIME/WEIGHT** (⌚/g) dial to select the appropriate time.

 Result: The oven light comes on and the turntable starts rotating.

- 1) Cooking starts and when it has finished the oven beeps 4 times.
- 2) The end reminder signal will beep 3 times (once every minute).
- 3) The current time is displayed again.



 Use only recipients that are microwave-safe.

 
 Select the Defrost (Time) function with a power level of 180 W if you want to defrost food manually. For further details on Defrost (Time) and defrosting time, refer to the page 27.




USING THE DEFROST (WEIGHT) FEATURE

The Defrost (Weight) feature enables you to defrost meat, poultry, fish. First, place the frozen food in the centre of the turntable and close the door.

1. Turn the **COOKING POWER CONTROL** knob to the **Defrost (Weight)** symbol.



 
2. Turn the **TIME/WEIGHT** (g) dial to select the appropriate weight.



Result: The oven light comes on and the turntable starts rotating.

- 1) Cooking starts and when it has finished the oven beeps 4 times.
- 2) The end reminder signal will beep 3 times (once every minute).
- 3) The current time is displayed again.

 Use only recipients that are microwave-safe.

USING THE DEFROST (WEIGHT) PROGRAMMES

Remove all kinds of packaging material before defrosting. Place the frozen foods on a turntable.

Turn the food over when the oven beeps.

Keep the corresponding standing time after Defrost (Weight) has finished.

Food	Portion	Standing Time	Recommendation
Meat	200-1500 g	20-60 min	Shield the edges with aluminium foil. Turn the food over when the oven beeps.
Poultry	200-1500 g	20-60 min	
Fish	200-1500 g	20-50 min	

USING THE POWER STEAM COOKING GUIDE (ONLY MG23F301EF*, MG23F301EJ*, MG23F302EF*, MG23F302EJ* MODELS)

The Power Steamer is based on the principle of steam cooking, and is designed for fast, healthy cooking in your Samsung Microwave oven. This accessory is ideal for cooking rice, pasta, vegetables, etc. in record time, while preserving their nutritional values.

 
The Microwave Power steamer set is made up of 3 items:



Bowl






Insert tray






Lid

All parts withstand temperatures from -20 °C to 140 °C. Suitable for freezer storage. Can also be used separately or together.

CONDITIONS of USE:

-  Do not use:
 - to cook foods with a high sugar or fat content,
 - with the grill or rotating heat function or on a hob.
-  Wash all parts well in soapy water before first use.
-  To find out cooking times, please refer to the instructions in the table on next page.

MAINTENANCE:

-  Your steamer can be washed in a dishwasher.
-  When washing by hand, use hot water and washing-up liquid. Do not use abrasive pads.
-  Some foods (such as tomato) may discolour the plastic. This is normal and not a manufacturing fault.

DEFROSTING:

Place the frozen food in the steam bowl without the lid. The liquid will remain in the bottom of the pot and will not harm the food.




COOKING:

Food	Portion	Power levels	Cooking time (min.)	Standing time (min.)	Handling
Artichokes	300 g (1-2 pcs)	800 W	5-6	1-2	Bowl with insert tray + Lid
	Instructions Rinse and clean artichokes. Put insert tray into bowl. Set artichokes on tray. Add one tablespoon lemon juice. Cover with lid.				
Fresh vegetables	300 g	800 W	4-5	1-2	Bowl with insert tray + Lid
	Instructions Weigh the vegetables (e.g. broccoli, cauliflower, carrots, pepper) after washing, cleaning and cutting into similar size. Put tray into bowl. Distribute vegetables on insert tray. Add 2 tablespoons water. Cover with lid.				
Frozen vegetables	300 g	600 W	7-8	2-3	Bowl with insert tray + Lid
	Instructions Put the frozen vegetables into the steam bowl. Put insert tray into bowl. Add 1 tablespoon water. Cover with lid. Stir well after cooking and standing.				
Rice	250 g	800 W	15-18	5-10	Bowl + Lid
	Instructions Put rice into the steam bowl. Add 500 ml cold water. Cover with lid. After cooking let stand white rice 5 minutes, brown rice 10 minutes.				
Jacket potatoes	500 g	800 W	7-8	2-3	Bowl + Lid
	Instructions Weigh and rinse the potatoes and put them into steam bowl. Add 3 tablespoons water. Cover with lid.				
Stew (CHILLED)	400 g	600 W	5-6	1-2	Bowl + Lid
	Instructions Put stew into the steam bowl. Cover with lid. Stir well before standing.				

Food	Portion	Power levels	Cooking time (min.)	Standing time (min.)	Handling
Soup (CHILLED)	400 g	800 W	3-4	1-2	Bowl + Lid
	Instructions Pour into steam bowl. Cover with lid. Stir well before standing.				
Frozen soup	400 g	800 W	8-10	2-3	Bowl + Lid
	Instructions Put frozen soup into steam bowl. Cover with lid. Stir well before standing.				
Frozen yeast dumpling with jam filling	150 g	600 W	1-2	2-3	Bowl + Lid
	Instructions Moist the top of filled dumplings with cold water. Put 1-2 frozen dumplings side by side into the steam bowl. Cover with lid.				
Fruit compote	250 g	800 W	3-4	2-3	Bowl + Lid
	Instructions Weigh the fresh fruits (e.g. apples, pears, plums, apricots, mangoes or pineapple) after peeling, washing and cutting into similar sizes or cubes. Put into steam bowl. Add 1-2 tablespoons water and 1-2 tbsp. sugar. Cover with lid.				

Handling of power steam cooker

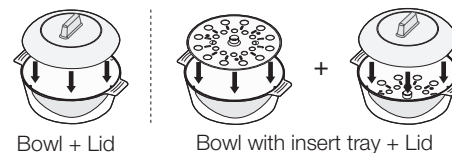

PRECAUTIONS:

 
- Take special care when opening the lid of your steamer, because the steam escaping may be very hot.
- Use oven gloves when handling after cooking.



USING THE CRUSTY PLATE (ONLY MG23F301EC*, MG23F301EJ*, MG23F302EC*, MG23F302EJ* MODELS)

This crusty plate allows you to brown food not only on the top with the grill, but also the bottom of the food turns crispy and brown due to the high temperature of the crusty plate. Several items which you can prepare on the crusty plate can be found in the chart (see next page). The crusty plate can also be used for bacon, eggs, sausages, etc.

1. Place the crusty plate directly on the turntable and preheat it with highest Microwave-Grill-Combination [600 W + Grill (꺄꺅꺅)] by following the times and instructions in the chart.



- ☑ Always use oven gloves to take out the crusty plate, as will become very hot.

2. Brush the plate with oil if you are cooking food, such as bacon and eggs, in order to brown the food nicely.

- ☑ Please note that the crusty plate has a teflon layer which is not scratch-resistant. Do not use any sharp objects like a knife to cut on the crusty plate.

- ☑ Use plastic accessories to avoid scratches on the surface of the crusty plate or remove the food from the plate before cutting.

 
3. Place the food on the crusty plate.

- ☑ Do not place any objects on the crusty plate that are not heat-resistant; e.g. plastic bowls.

- ☑ Never place the crusty plate in the oven without turntable.



4. Place the crusty plate on the metal rack (or turntable) in the microwave.



5. Select the appropriate cooking time and power. (Refer to the table on the side)

How to clean the Crusty Plate

Clean the crusty plate with warm water and detergent and rinse off with clean water.

- ☑ Do not use a scrubbing brush or a hard sponge otherwise the top layer will be damaged.

Please Note




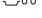

The crusty plate is not dishwasher-safe.


MANUAL CRUSTY COOK PROGRAMMES

We recommend to preheat the crusty plate directly on the turntable. Preheat crusty plate with 600 W + Grill (꺄꺅꺅) function for 3-5 minutes. Follow the times and instructions in the table.

Food	Portion	Power	Preheating time (min.)	Cooking time (min.)
Bacon	4 slices (80 g)	600 W + Grill 🔥🔥	3	3½-4
	< Recommendations >			
	Preheat crusty plate. Put slices side by side on crusty plate. Put crusty plate on the rack.			
Grilled Tomatoes	200 g (2 pcs)	450 W + Grill 🔥🔥	3	4½-5
	< Recommendations >			
	Preheat crusty plate. Cut tomatoes in halves. Put some cheese on top. Arrange in a circle on crusty plate. Put crusty plate on the rack.			
Burger (FROZEN)	2 pieces (125 g)	600 W + Grill 🔥🔥	3	7-7½
	< Recommendations >			
	Preheat crusty plate. Put frozen burger in a circle on crusty plate. Put crusty plate on the rack. Turn over after 4-5 min.			




Food	Portion	Power	Preheating time (min.)	Cooking time (min.)
Baguettes (FROZEN)	200-250 g (2 pcs)	450 W + Grill 	4	8-9
	< Recommendations >			
	Preheat crusty plate. Put one baguette beside the centre, 2 baguettes side by side on the plate. Put crusty plate on rack.			
Pizza (FROZEN)	300-350 g	600 W + Grill 	4	9-10
	< Recommendations >			
	Preheat crusty plate. Put the frozen pizza on the crusty plate. Put crusty plate on the rack.			
Baked Potatoes	250 g 500 g	600 W + Grill 	3	5-6 8-9
	< Recommendations >			
	Preheat crusty plate. Cut potatoes in halves. Put them on the crusty plate with the cut side to the bottom. Arrange in a circle. Put the plate on the rack.			
Fish Fingers (FROZEN)	150 g (5 pcs) 300 g (10 pcs)	600 W + Grill 	4	7-8 9-10
	< Recommendations >			
	Preheat crusty plate. Brush plate with 1 tbsp. oil. Put fish fingers in a circle on the plate. Turn over after 4 min (5 pc) or after 6 min (10 pc).			
Chicken Nuggets (FROZEN)	125 g 250 g	600 W + Grill 	4	5-5½ 7½-8
	< Recommendations >			
	Preheat crusty plate. Brush plate with 1 tbsp. Put chicken nuggets on the plate. Put crusty plate on the rack. Turn over after 3 min (125 g) or 5 min (250 g).			


Food	Portion	Power	Preheating time (min.)	Cooking time (min.)
Pizza (CHILLED)	300-350 g	450 W + Grill 	4	6½-7½
	< Recommendations >			
	Preheat crust plate. Put the chilled pizza on the plate. Put crust plate on rack.			

CHOOSING THE ACCESSORIES

Use microwave-safe recipients; do not use plastic containers, dishes, paper cups, towels, etc.

 If you wish to select the combined cooking mode (grill and microwave), use only dishes that are microwave-safe and oven-proof. Metallic cookware or utensils may damage your oven.




 For further details on suitable cookware and utensils, refer to the cookware guide on page 22.


GRILLING

The grill enables you to heat and brown food quickly, without using microwaves. To this aim, a grill rack is supplied with your microwave oven.

 1. Preheat the grill to the required temperature, by turning the **COOKING POWER CONTROL** knob to **Grill** symbol and set the preheat time by turning the **TIME/WEIGHT (G/g)** knob.



 2. Open the door. Place the food on the rack and the rack on the turntable. Close the door.








3. Set the time by turning the **TIME/WEIGHT (G/g)** dial.


Result : The oven light comes on and the turntable starts rotating.


- 1) Cooking starts and when it has finished the oven beeps 4 times.
- 2) The end reminder signal will beep 3 times (once every minute).
- 3) The current time is displayed again.

 Do not worry if the heater turns off and on while grilling. This system is designed to prevent overheating of the oven.

 Always use oven gloves when touching the dishes in the oven, as they will be very hot.
Check that the heating element is in the horizontal position.

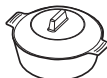

  **DO NOT** operate the **GRILL (U)** / **COMBI (U/U)** mode with power steam cooker.

Operation mode	MW (U)	GRILL (U) / COMBI (U/U)
 (Steam cooker)	O	X

 


COMBINING MICROWAVES AND THE GRILL


You can also combine microwave cooking with the grill, to cook quickly and brown at the same time.

-  ALWAYS use microwave-safe and oven-proof cookware. Glass or ceramic dishes are ideal as they allow the microwaves to penetrate the food evenly.
-  ALWAYS use oven gloves when touching the recipients in the oven, as they will be very hot.

1. Open the oven door. Place the food on the rack and the rack on the turntable. Close the door.



 
2. Turn the **COOKING POWER CONTROL** knob to the appropriate power Level.





3. Set the time by turning **TIME/WEIGHT (G/g)** dial.

 
Result: The oven light comes on and the turntable starts rotating.

- 1) Cooking starts and when it has finished the oven beeps 4 times.
- 2) The end reminder signal will beep 3 times (once every minute).
- 3) The current time is displayed again.



 The maximum microwave power for the combined microwave and grill mode is 600 W.

 **DO NOT** operate the **GRILL (U)** / **COMBI (U/U)** mode with power steam cooker.

Operation mode	MW (U)	GRILL (U) / COMBI (U/U)
 (Steam cooker)	O	X



cookware guide

To cook food in the microwave oven, the microwaves must be able to penetrate the food, without being reflected or absorbed by the dish used. Care must therefore be taken when choosing the cookware. If the cookware is marked microwave-safe, you do not need to worry. The following table lists various types of cookware and indicates whether and how they should be used in a microwave oven.

Cookware	Microwave-safe	Comments
Aluminum foil	✓ X	Can be used in small quantities to protect areas against overcooking. Arcing can occur if the foil is too close to the oven wall or if too much foil is used.
Browning plate	✓	Do not preheat for more than eight minutes.
China and earthenware	✓	Porcelain, pottery, glazed earthenware and bone china are usually suitable, unless decorated with a metal trim.
Disposable polyester cardboard dishes	✓	Some frozen foods are packaged in these dishes.
Fast-food packaging		
• Polystyrene cups containers	✓	Can be used to warm food. Overheating may cause the polystyrene to melt.
• Paper bags or newspaper	X	May catch fire.
• Recycled paper or metal trims	X	May cause arcing.
Glassware		
• Oven-to-table ware	✓	Can be used, unless decorated with a metal trim.

Cookware	Microwave-safe	Comments
• Fine glassware	✓	Can be used to warm foods or liquids. Delicate glass may break or crack if heated suddenly.
• Glass jars	✓	Must remove the lid. Suitable for warming only.
Metal		
• Dishes	X	May cause arcing or fire.
• Freezer bag twist ties	X	
Paper		
• Plates, cups, napkins and kitchen paper	✓	For short cooking times and warming. Also to absorb excess moisture.
• Recycled paper	X	May cause arcing.
Plastic		
• Containers	✓	Particularly if heat-resistant thermoplastic. Some other plastics may warp or discolour at high temperatures. Do not use Melamine plastic.
• Cling film	✓	Can be used to retain moisture. Should not touch the food. Take care when removing the film as hot steam will escape.
• Freezer bags	✓ X	Only if boilable or oven-proof. Should not be airtight. Prick with a fork, if necessary.
Wax or grease-proof paper	✓	Can be used to retain moisture and prevent spattering.

✓ : Recommended ✓X : Use caution X : Unsafe



cooking guide

MICROWAVES

Microwave energy actually penetrates food, attracted and absorbed by its water, fat and sugar content.

The microwaves cause the molecules in the food to move rapidly. The rapid movement of these molecules creates friction and the resulting heat cooks the food.

COOKING

Cookware for microwave cooking:

Cookware must allow microwave energy to pass through it for maximum efficiency. Microwaves are reflected by metal, such as stainless steel, aluminium and copper, but they can penetrate through ceramic, glass, porcelain and plastic as well as paper and wood. So food must never be cooked in metal containers.

Food suitable for microwave cooking:

Many kinds of food are suitable for microwave cooking, including fresh or frozen vegetables, fruit, pasta, rice, grains, beans, fish, and meat. Sauces, custard, soups, steamed puddings, preserves, and chutneys can also be cooked in a microwave oven. Generally speaking, microwave cooking is ideal for any food that would normally be prepared on a hob. Melting butter or chocolate, for example (see the chapter with tips, techniques and hints).

Covering during cooking

To cover the food during cooking is very important, as the evaporated water rises as steam and contributes to cooking process. Food can be covered in different ways: e.g. with a ceramic plate, plastic cover or microwave suitable cling film.

Standing times

After cooking is over food the standing time is important to allow the temperature to even out within the food.

Cooking guide for frozen vegetables

Use a suitable glass pyrex bowl with lid. Cook covered for the minimum time - see table. Continue cooking to get the result you prefer.

Stir twice during cooking and once after cooking. Add salt, herbs or butter after cooking. Cover during standing time.

Food	Portion	Power	Time (min.)	Standing time (min.)	Instructions
Spinach	150 g	600 W	4½-5½	2-3	Add 15 ml (1 tbsp.) cold water
Broccoli	300 g	600 W	9-10	2-3	Add 30 ml (2 tbsp.) cold water.
Peas	300 g	600 W	7½-8½	2-3	Add 15 ml (1 tbsp.) cold water.
Green beans	300 g	600 W	8-9	2-3	Add 30 ml (2 tbsp.) cold water.
Mixed vegetables (carrots/peas/corn)	300 g	600 W	7½-8½	2-3	Add 15 ml (1 tbsp.) cold water.
Mixed vegetables (Chinese style)	300 g	600 W	8-9	2-3	Add 15 ml (1 tbsp.) cold water.



Cooking guide for rice and pasta

Rice : Use a large glass pyrex bowl with lid - rice doubles in volume during cooking. Cook covered.
After the cooking time is over, stir before standing time and salt or add herbs and butter.
Remark: the rice may not have absorbed all water after the cooking time is finished.

Pasta : Use a large glass pyrex bowl. Add boiling water, a pinch of salt and stir well. Cook uncovered.
Stir occasionally during and after cooking. Cover during standing time and drain thoroughly afterwards.

Food	Portion	Power	Time (min.)	Standing time (min.)	Instructions
White rice (Parboiled)	250 g	800 W	16-17	5	Add 500 ml cold water.
Brown rice (Parboiled)	250 g	800 W	21-22	5	Add 500 ml cold water.
Mixed rice (Rice + wild rice)	250 g	800 W	17-18	5	Add 500 ml cold water.
Mixed corn (Rice + grain)	250 g	800 W	18-19	5	Add 400 ml cold water.
Pasta	250 g	800 W	11-12	5	Add 1000 ml hot water.

Cooking guide for fresh vegetables

Use a suitable glass pyrex bowl with lid. Add 30-45 ml cold water (2-3 tbsp.) for every 250 g unless another water quantity is recommended - see table. Cook covered for the minimum time - see table. Continue cooking to get the result you prefer. Stir once during and once after cooking. Add salt, herbs or butter after cooking. Cover during a standing time of 3 minutes.

Hint : Cut the fresh vegetables into even sized pieces. The smaller they are cut, the quicker they will cook.

All fresh vegetables should be cooked using full microwave power (800 W).

Food	Portion	Time (min.)	Standing time (min.)	Instructions
Broccoli	250 g 500 g	4-4½ 7-7½	3	Prepare even sized florets. Arrange the stems to the centre.
Brussels sprouts	250 g	5½-6½	3	Add 60-75 ml (4-5 tbsp.) water.
Carrots	250 g	4½-5	3	Cut carrots into even sized slices.
Cauliflower	250 g 500 g	5-5½ 8½-9	3	Prepare even sized florets. Cut big florets into halves. Arrange stems to the centre.
Courgettes	250 g	3½-4	3	Cut courgettes into slices. Add 30 ml (2 tbsp.) water or a knob of butter. Cook until just tender.
Egg plants	250 g	3½-4	3	Cut egg plants into small slices and sprinkle with 1 tablespoon lemon juice.
Leeks	250 g	4½-5	3	Cut leeks into thick slices.
Mushrooms	125 g 250 g	1½-2 3-3½	3	Prepare small whole or sliced mushrooms. Do not add any water. Sprinkle with lemon juice. Spice with salt and pepper. Drain before serving.
Onions	250 g	5½-6	3	Cut onions into slices or halves. Add only 15 ml (1 tbsp.) water.
Pepper	250 g	4½-5	3	Cut pepper into small slices.



Food	Portion	Time (min.)	Standing time (min.)	Instructions
Potatoes	250 g 500 g	4-5 7½-8½	3	Weigh the peeled potatoes and cut them into similar sized halves or quarters.
Turnip cabbage	250 g	5-5½	3	Cut turnip cabbage into small cubes.

REHEATING

Your microwave oven will reheat food in a fraction of the time that conventional ovens hobs normally take.

Use the power levels and reheating times in the following chart as a guide. The times in the chart consider liquids with a room temperature of about +18 to +20 °C or a chilled food with a temperature of about +5 to +7 °C.

Arranging and covering

Avoid reheating large items such as joint of meat – they tend to overcook and dry out before the centre is piping hot. Reheating small pieces will be more successful.

Power levels and stirring

Some foods can be reheated using 800 W power while others should be reheated using 600 W, 450 W or even 300 W.

Check the tables for guidance. In general, it is better to reheat food using a lower power level, if the food is delicate, in large quantities, or if it is likely to heat up very quickly (mince pies, for example).

Stir well or turn food over during reheating for best results. When possible, stir again before serving.

Take particular care when heating liquids and baby foods. To prevent eruptive boiling of liquids and possible scalding, stir before, during and after heating. Keep them in the microwave oven during standing time. We recommend putting a plastic spoon or glass stick into the liquids. Avoid overheating (and therefore spoiling) the food.

It is preferable to underestimate cooking time and add extra heating time, if necessary.

Heating and standing times

When reheating food for the first time, it is helpful to make a note of the time taken – for future reference.

Always make sure that the reheated food is piping hot throughout.

Allow food to stand for a short time after reheating - to let the temperature even out.

The recommended standing time after reheating is 2-4 minutes, unless another time is recommended in the chart.

Take particular care when heating liquids and baby food. See also the chapter with the safety precautions.

REHEATING LIQUIDS

Always allow a standing time of at least 20 seconds after the oven has been switched off to allow the temperature to even out. Stir during heating, if necessary, and ALWAYS stir after heating. To prevent eruptive boiling and possible scalding, you should put a spoon or glass stick into the beverages and stir before, during and after heating.

Reheating liquids and food

Use the power levels and times in this table as a guide lines for reheating.

Food	Portion	Power	Time (min.)	Standing time (min.)	Instructions
Drinks (coffee, tea and water)	150 ml (1 cup) 250 ml (1 mug)	800 W	1-1½ 1½-2	1-2	Pour in to a ceramic cup and reheat uncovered. Place cup (150 ml) or mug (250 ml) in the centre of turntable. Stir carefully before and after standing time.
Soup (chilled)	250 g	800 W	3-3½	2-3	Pour into a deep ceramic plate. Cover with plastic lid. Stir well after reheating. Stir again before serving.



Food	Portion	Power	Time (min.)	Standing time (min.)	Instructions
Stew (chilled)	350 g	600 W	5½-6½	2-3	Put stew in a deep ceramic plate. Cover with plastic lid. Stir occasionally during reheating and again before standing and serving.
Pasta with sauce (chilled)	350 g	600 W	4½-5½	3	Put pasta (e.g. spaghetti or egg noodles) on a flat ceramic plate. Cover with microwave cling film. Stir before serving.
Filled pasta with sauce (chilled)	350 g	600 W	5-6	3	Put filled pasta (e.g. ravioli, tortellini) in a deep ceramic plate. Cover with plastic lid. Stir occasionally during reheating and again before standing and serving.
Plated meal (chilled)	350 g	600 W	5½-6½	3	Plate a meal of 2-3 chilled components on a ceramic dish. Cover with microwave cling-film.

REHEATING BABY FOOD

BABY FOOD: Empty into a deep ceramic plate. Cover with plastic lid. Stir well after reheating!

Let stand for 2-3 minutes before serving. Stir again and check the temperature. Recommended serving temperature: between 30-40 °C.

BABY MILK: Pour milk into a sterilised glass bottle. Reheat uncovered. Never heat a baby's bottle with teat on, as the bottle may explode if overheated. Shake well before standing time and again before serving ! Always carefully check the temperature of baby milk or food before giving it

to the baby. Recommended serving temperature: ca. 37 °C.

REMARK: Baby food particularly needs to be checked carefully before serving to prevent burns. Use the power levels and times in the next table as a guide lines for reheating.

Reheating baby food and milk

Use the power levels and times in this table as guide lines for reheating.

Food	Portion	Power	Time	Standing time (min.)	Instructions
Baby food (vegetables + meat)	190 g	600 W	30 sec.	2-3	Empty into ceramic deep plate. Cook covered. Stir after cooking time. Stand for 2-3 minutes. Before serving, stir well and check the temperature carefully.
Baby porridge (grain + milk + fruit)	190 g	600 W	20 sec.	2-3	Empty into ceramic deep plate. Cook covered. Stir after cooking time. Stand for 2-3 minutes. Before serving, stir well and check the temperature carefully.
Baby milk	100 ml 200 ml	300 W	30-40 sec. 50 sec. to 1 min.	2-3	Stir or shake well and pour into a sterilized glass bottle. Place into the centre of turn-table. Cook uncovered. Shake well and stand for at least 3 minutes. Before serving, shake well and check the temperature carefully.



Defrost (Time)

Microwaves are an excellent way of defrosting frozen food. Microwaves gently defrost frozen food in a short period of time. This can be of great advantage, if unexpected guests suddenly show up.

Frozen poultry must be thoroughly thawed before cooking. Remove any metal ties and take it out of any wrapping to allow thawed liquid to drain away.

Put the frozen food on a dish without cover. Turn over half way, drain off any liquid and remove any giblets as soon as possible.

Check the food occasionally to make sure that it does not feel warm.

If smaller and thinner parts of the frozen food start to warm up, they can be shield by wrapping very small strips of aluminium foil around them during defrosting.

Should poultry start to warm up on the outer surface, stop thawing and allow it to stand for 20 minutes before continuing.

Leave the fish, meat and poultry to stand in order to complete defrosting. The standing time for complete defrosting will vary depending on the quantity defrosted. Please refer to the table below.

Hint : Flat food defrosts better than thick and smaller quantities need less time than bigger ones. Remember this hint while freezing and defrosting food.

For defrosting of frozen food with a temperature of about -18 to -20 °C, use the following table as a guide.

All frozen food should be defrosted using defrosting power level (180 W).

Food	Portion	Time (min.)	Standing time (min.)	Instructions
Meat				
Minced beef	250 g 500 g	6½-7½ 10-12	5-25	Place the meat on a flat ceramic plate. Shield thinner edges with aluminium foil. Turn over after half of defrosting time!
Pork steaks	250 g	7½-8½		
Poultry				

Food	Portion	Time (min.)	Standing time (min.)	Instructions
Chicken pieces Whole chicken	500 g (2 pcs)	14½-15½	15-40	First, put chicken pieces first skin-side down, whole chicken first breast-side-down on a flat ceramic plate. Shield the thinner parts like wings and ends with aluminium foil. Turn over after half of defrosting time!
	900 g	28-30		
Fish				
Fish fillets	200 g (2 pcs)	6-7	5-15	Put frozen fish in the middle of a flat ceramic plate. Arrange the thinner parts under the thicker parts. Shield narrow ends with aluminium foil. Turn over after half of defrosting time!
	400 g (4 pcs)	12-13		
Fruits				
Berries	250 g	6-7	5-10	Distribute fruits on a flat, round glass dish (with a large diameter).
Bread				
Bread rolls (each about. 50 g) Toast/sandwich German bread (wheat + rye flour)	2 pcs 4 pcs	½-1 2-2½	5-20	Arrange rolls in a circle or bread horizontally on kitchen paper in the middle of turntable. Turn over after half of defrosting time!
	250 g	4½-5		
	500 g	8-10		



GRILL

The grill-heating element is located underneath the ceiling of the cavity. It operates while the door is closed and the turntable is rotating. The turntable's rotation makes the food brown more evenly. Preheating the grill for 3-4 minutes will make the food brown more quickly.

Cookware for grilling:

Should be flameproof and may include metal. Do not use any type of plastic cookware, as it can melt.

Food suitable for grilling:

Chops, sausages, steaks, hamburgers, bacon and gammon rashers, thin fish portions, sandwiches and all kinds of toast with toppings.

Important remark:

Please remember that food must be placed on the high rack, unless another instruction is recommended.

MICROWAVE + GRILL

This cooking mode combines the radiant heat that is coming from the grill with the speed of microwave cooking. It operates only while the door is closed and the turntable is rotating. Due to the rotation of the turntable, the food browns evenly. Three combination modes are available with this model: 600 W + Grill, 450 W + Grill and 300 W + Grill.

Cookware for cooking with microwave + grill

Please use cookware that microwaves can pass through. Cookware should be flameproof. Do not use metal cookware with combination mode. Do not use any type of plastic cookware, as it can melt.

Food suitable for microwave + grill cooking:

Food suitable for combination mode cooking include all kinds of cooked food which need reheating and browning (e.g. baked pasta), as well as foods which require a short cooking time to brown the top of the food. Also, this mode can be used for thick food portions that benefit from a browned and crispy top (e.g. chicken pieces, turning them over half way through cooking). Please refer to the grill table for further details.

Important remark:

Whenever the combination mode (microwave + grill) is used, make sure that the grill heating element is under the ceiling in the horizontal position and not on the back-wall in the vertical position. The food should be placed on the high rack, unless another instruction is recommended. Otherwise it has to be placed directly on the turntable. Please refer to the instructions in the following chart.

The food must be turned over, if it is to be browned on both sides.

Grill Guide for frozen food

Use the power levels and times in this table as guide lines for grilling.

Frozen food	Portion	Power	1st side time (min.)	2nd side time (min.)
Bread Rolls (each ca. 50 g)		MW + Grill	300 W + Grill	Grill only
	2 pcs		1-1½	1-2
	4 pcs		2-2½	1-2
	Instructions			
	Arrange rolls in a circle on rack. Grill the second side of the rolls up to the crisp you prefer. Stand for 2-5 minutes			
Baguettes+Topping (tomatos, cheese, ham, mushrooms)	250-300 g (2 pcs)	450 W + Grill	8-9	-
	Instructions			
	Put 2 frozen baguettes side by side on the rack. After grilling stand for 2-3 minutes.			



Frozen food	Portion	Power	1st side time (min.)	2nd side time (min.)
Gratin (vegetables potatoes)	400 g	450 W + Grill	13-14	-
	Instructions			
	Put frozen gratin into a small, round glass pyrex dish. Put the dish on the rack. After cooking stand for 2-3 minutes.			
Pasta (Cannelloni, Macaroni, Lasagne)	400 g	MW + Grill	600 W + Grill 14-15	Grill only 2-3
	Instructions			
	Put frozen pasta into a small flat rectangular glass pyrex dish. Put the dish directly on the turntable. After cooking stand for 2-3 minutes.			
Chicken Nuggets	250 g	450 W + Grill	5-5½	3-3½
	Instructions			
	Put chicken nuggets on the rack			
Oven Chips	250 g	450 W + Grill	9-11	4-5
	Instructions			
	Put oven chips evenly on baking paper on the rack.			

Grill Guide for fresh food

Preheat the grill with the grill-function for 4 minutes.

Use the power levels and times in this table as guide lines for grilling.

Fresh food	Portion	Power	1st side time (min.)	2nd side time (min.)
Toast Slices	4 pcs (each 25 g)	Grill only	6-8	4-5½
	Instructions			
	Put the toast slices side by side on the rack.			
Bread Rolls (already baked)	2-4 pieces	Grill only	2-3	2-3
	Instructions			
	Put bread rolls first with the bottom side up in a circle directly on the turntable.			

Fresh food	Portion	Power	1st side time (min.)	2nd side time (min.)
Grilled Tomatoes	200 g (2 pcs)	MW + Grill	300 W + Grill 4½-5½	Grill only 2-3
	400 g (4 pcs)		7-8	
	Instructions			
	Cut tomatoes into halves. Put some cheese on top. Arrange in a circle in a flat glass pyrex dish. Place it on the rack.			
Toast Hawaii (pineapple, ham, cheese slices)	2 pcs (300 g)	450 W + Grill	3½-4	-
	Instructions			
	Toast the bread slices first. Put the toast with topping on the rack. Put 2 toasts opposite directly on the rack. Stand for 2-3 minutes.			
Baked Potatoes	250 g 500 g	600 W + Grill	4½-5½ 8-9	-
	Instructions			
	Cut potatoes into halves. Put them in a circle on the rack with the cut side to the grill.			
Chicken Pieces	450-500 g (2 pcs)	300 W + Grill	10-12	12-13
	Instructions			
	Prepare chicken pieces with oil and spices. Put them in a circle with the bones to the middle. Put one chicken piece not into the centre of the rack. Stand for 2-3 minutes.			
Lamb Chops/ Beef Steaks (medium)	400 g (4 pcs)	Grill only	12-15	9-12
	Instructions			
	Brush the lamb chops with oil and spices. Lay them in a circle on the rack. After grilling stand for 2-3 minutes.			



Fresh food	Portion	Power	1st side time (min.)	2nd side time (min.)
Pork Steaks	250 g (2 pcs)	MW + Grill	300 W + Grill 7-8	Grill only 6-7
	Instructions			
	Brush the pork steaks with oil and spices. Lay them in a circle on the rack. After grilling stand for 2-3 minutes.			
Baked Apples	1 apple (ca. 200 g) 2 apples (ca. 400 g)	300 W + Grill	4-4½ 6-7	-
	Instructions			
	Core the apples and fill them with raisins and jam. Put some almond slices on top. Put apples on a flat glass pyrex dish. Place the dish directly on the turntable.			
Roast chicken	1200 g	600 W + Grill	15-18	15-18
	Instructions			
	Brush chicken with oil and spices. Put chicken first breast side down, second breast side up on pyrex dish. Stand for 5 minutes after grilling.			

SPECIAL HINTS

MELTING BUTTER

Put 50 g butter into a small deep glass dish. Cover with plastic lid. Heat for 30-40 seconds using 800 W, until butter is melted.

MELTING CHOCOLATE

Put 100 g chocolate into a small deep glass dish. Heat for 3-5 minutes, using 450 W until chocolate is melted. Stir once or twice during melting. Use oven gloves while taking out!

MELTING CRYSTALLIZED HONEY

Put 20 g crystallized honey into a small deep glass dish. Heat for 20-30 seconds using 300 W, until honey is melted.

MELTING GELATINE

Lay dry gelatine sheets (10 g) for 5 minutes into cold water. Put drained gelatine into a small glass pyrex bowl. Heat for 1 minute using 300 W. Stir after melting.

COOKING GLAZE/ICING (FOR CAKE AND GATEAUX)

Mix instant glaze (approximately 14 g) with 40 g sugar and 250 ml cold water.

Cook uncovered in a glass pyrex bowl for 3½ to 4½ minutes using 800 W, until glaze/icing is transparent. Stir twice during cooking.

COOKING JAM

Put 600 g fruits (for example mixed berries) in a suitable sized glass pyrex bowl with lid. Add 300 g preserving sugar and stir well. Cook covered for 10-12 minutes using 800 W. Stir several times during cooking. Empty directly into small jam glasses with twist-off lids. Stand on lid for 5 minutes.

COOKING PUDDING

Mix pudding powder with sugar and milk (500 ml) by following the manufacturers instructions and stir well. Use a suitable sized glass pyrex bowl with lid. Cook covered for 6½ to 7½ minutes using 800 W. Stir several times well during cooking.

BROWNING ALMOND SLICES

Spread 30 g sliced almonds evenly on a medium sized ceramic plate. Stir several times during browning for 3½ to 4½ minutes using 600 W. Let it stand for 2-3 minutes in the oven. Use oven gloves while taking out!



troubleshooting

If you have any of the problems listed below try the solutions given.

This is normal.

- Condensation inside the oven.
- Air flow around the door and outer casing.
- Light reflection around the door and outer casing.
- Steam escaping from around the door or vents.

The oven does not start when you turn the **TIME/WEIGHT (Defrost)** dial.

- Is the door completely closed?

The food is not cooked at all.

- Have you set the timer correctly?
- Is the door closed?
- Have you overloaded the electric circuit and caused a fuse to blow or a breaker to be triggered?

The food is either overcooked or undercooked.

- Was the appropriate cooking length set for the type of food?
- Was an appropriate power level chosen?

The light bulb is not working.

- The Light bulb should not be replaced in person for safety reasons. Please contact nearest authorised Samsung customer care, to arrange for a qualified engineer to replace the bulb.

The oven causes interference with radios or televisions.

- Slight interference may be observed on televisions or radios when the oven is operating. This is normal. To solve this problem, install the oven away from televisions, radios and aerials.

Sparkling and cracking occur inside the oven (arcing).

- Have you used a dish with metal trimmings?
- Have you left a fork or other metal utensil inside the oven?
- Is aluminum foil too close to the inside walls?

Smoke and bad smell when initial operating.

- It's a temporary condition by new component heating. Smoke and smell will disappear completely after 10 minutes operation. To remove smell more quickly, please operate microwave oven with

putting lemon formation or lemon juice in the cabinet.

- ✍ If the above guidelines do not enable you to solve the problem, then contact your local SAMSUNG customer service centre. Please have the following information read.

- The model and serial numbers, normally printed on the rear of the oven
- Your warranty details
- A clear description of the problem

Then contact your local dealer or SAMSUNG aftersales service.

technical specifications

SAMSUNG strives to improve its products at all times. Both the design specifications and these user instructions are thus subject to change without notice.

Model	MG23F301E**, MG23F302E**
Power source	220 V ~ 50 Hz
Power consumption	
Microwave	1200 W
Grill	1050 W
Combined mode	2250 W
Output power	100 W / 800 W (IEC-705)
Operating frequency	2450 MHz
Magnetron	OM75P(31)
Cooling method	Cooling fan motor
Dimensions (W x H x D)	
Outside	489 x 275 x 392 mm
Oven cavity	330 x 211 x 324 mm
Volume	23 liter
Weight	
Net	13 kg approx



QUESTIONS OR COMMENTS

COUNTRY	CALL	OR VISIT US ONLINE AT
AUSTRALIA	1300 362 603	www.samsung.com/au
NEW ZEALAND	0800 SAMSUNG (0800 726 786)	www.samsung.com/nz
CHINA	400-810-5858	www.samsung.com
HONG KONG	(852) 3698 4698	www.samsung.com/hk (Chinese) www.samsung.com/hk_en (English)
INDIA	1800 3000 8282 1800 266 8282	www.samsung.com/in
INDONESIA	0800-112-8888 (Toll Free) 021-5699-7777	www.samsung.com/id
JAPAN	0120-327-527	www.samsung.com
MALAYSIA	1800-88-9999	www.samsung.com/my
PHILIPPINES	1-800-10-7267864 [PLDT] 1-800-8-7267864 [Globe landline and Mobile] 02-4222111 [Other landline]	www.samsung.com/ph
SINGAPORE	1800-SAMSUNG(726-7864)	www.samsung.com/sg
THAILAND	0-2689-3232 1800-29-3232	www.samsung.com/th
TAIWAN	0800-329-999	www.samsung.com/tw
VIETNAM	1 800 588 889	www.samsung.com

DE68-03911L

